

# LISTA DE APLICACIONES - BUYERS GUIDE

## 151842-122

 



8 424073 097262


Qty: 660

Weight: 8.200

O.E.M.	MAKE
2 052 657 0	VOLVO
2 056 041 5	VOLVO
2 056 871 3	VOLVO
2 076 596 3	VOLVO
5001 864 380	RENAULT TRUCKS
683 24 665 M13	MERITOR

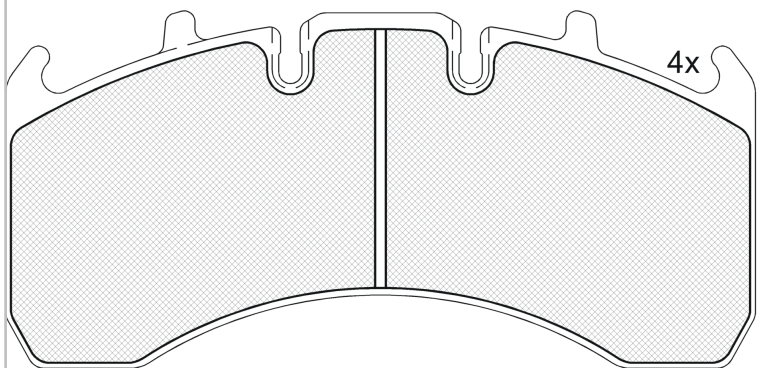

1 - Ref. 690182 E

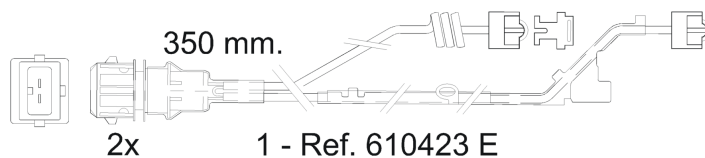

1 - Ref. 610423 E

## 151842-122



90R-01178/2173



Meritor Elsa 1

210.2x100.2x30

**WVA**

29169

**MAKE**

MERITOR

RENAULT TRUCKS

VOLVO



Trac.

CC

Kw

CV



Front / Rear

### MERITOR

LM					Trailer Axle		
LM	01/04-				01.53-		■
LM	01/04-, Lifting Axle				01.53-		■
LM	Lifting Axle				01.53-		■
LM	01/04-, Lifting Axle				01.53-		■
LM	01/04-, Lifting Axle				01.53-		■
LM	Lifting Axle				01.53-		■
LMC					Trailer Axle		
LMC	01/04-, Lifting Axle				01.53-		■
LMC	01/04-, Lifting Axle				01.53-		■
TA					Trailer Axle		
TA					01.53-		■
TA	Lifting Axle				01.53-		■
TAC					Trailer Axle		
TAC	Lifting Axle				01.53-		■
TAC	01/04-, Lifting Axle				01.53-		■
TM					Trailer Axle		
TM	Lifting Axle				01.53-		■
TM	01/04-, Lifting Axle				01.53-		■
TM	Lifting Axle				01.53-		■
TM	01/04-, Lifting Axle				01.53-		■

### RENAULT TRUCKS

# LISTA DE APLICACIONES - BUYERS GUIDE

03.05-					Platform/Chassis				
DXi 12 440.18 (DXI 12)	Lifting Axle	Diesel		12130	324	441	10.04-04.06	■	
DXi 12 440.24 (DXI 12)	Lifting Axle	Diesel		12130	324	441	10.04-04.06	■	
DXi 12 440.26 (DXI 12)	Lifting Axle	Diesel		12130	324	441	10.04-04.06	■	
DXi 12 480.18 (DXI 12)	Lifting Axle	Diesel		12130	353	480	10.04-04.06	■	
DXi 12 480.24 (DXI 12)	Lifting Axle	Diesel		12130	353	480	10.04-04.06	■	
DXi 12 480.26 (DXI 12)	Lifting Axle	Diesel		12130	353	480	10.04-04.06	■	
DXi 13 440.19 (DXI 13)	Lifting Axle	Diesel		12777	323	440	03.09-	■	
DXi 13 460.24 (DXI 13)	Lifting Axle	Diesel		12777	339	461	05.06-	■	
DXi 13 460.25 (DXI 13)	Lifting Axle	Diesel		12777	339	461	05.06-	■	
DXi 13 460.26 (DXI 13)	Lifting Axle	Diesel		12777	339	461	05.06-	■	
DXi 13 480.19 (DXI 13)	Lifting Axle	Diesel		12777	353	480	03.09-	■	
DXi 13 480.26 (DXI 13)	Lifting Axle	Diesel		12777	353	480	03.09-	■	
DXi 13 500.24 (DXI 13)	Lifting Axle	Diesel		12777	368	500	05.06-	■	
DXi 13 500.25 (DXI 13)	Lifting Axle	Diesel		12777	368	500	05.06-	■	
DXi 13 500.26 (DXI 13)	Lifting Axle	Diesel		12777	368	500	05.06-	■	
DXi 13 520.19 (DXI 13)	Lifting Axle	Diesel		12777	382	520	08.09-	■	
DXi 13 520.24 (DXI 13)	Lifting Axle	Diesel		12777	382	520	08.09-	■	
DXi 13 520.25 (DXI 13)	Lifting Axle	Diesel		12777	382	520	08.09-	■	
DXi 13 520.26 (DXI 13)	Lifting Axle	Diesel		12777	382	520	08.09-	■	
03.05-					Truck Tractor				
DXi 12 440.18 T (DXI 12)	Lifting Axle	Diesel		12130	324	441	10.04-04.06	■	
DXi 12 440.26 T (DXI 12)	Lifting Axle	Diesel		12130	324	441	10.04-04.06	■	
DXi 12 480.18 T (DXI 12)	Lifting Axle	Diesel		12130	353	480	10.04-04.06	■	
DXi 12 480.26 T (DXI 12)	Lifting Axle	Diesel		12130	353	480	10.04-04.06	■	
DXi 13 440.19 (DXI 13)	Lifting Axle	Diesel		12777	323	440	03.09-	■	
DXi 13 460.18 T (DXI 13)	Lifting Axle	Diesel		12777	339	461	05.06-	■	
DXi 13 460.26 T (DXI 13)	Lifting Axle	Diesel		12777	339	461	05.06-	■	
DXi 13 480.19 (DXI 13)	Lifting Axle	Diesel		12777	353	480	03.09-	■	
DXi 13 480.26 (DXI 13)	Lifting Axle	Diesel		12777	353	480	03.09-	■	
DXi 13 500.18 T (DXI 13)	Lifting Axle	Diesel		12777	368	500	05.06-	■	
DXi 13 500.26 T (DXI 13)	Lifting Axle	Diesel		12777	368	500	05.06-	■	
DXi 13 520.18 (DXI 13)	Lifting Axle	Diesel		12777	382	520	08.09-	■	
DXi 13 520.19 (DXI 13)	Lifting Axle	Diesel		12777	382	520	08.09-	■	
DXi 13 520.25 (DXI 13)	Lifting Axle	Diesel		12777	382	520	08.09-	■	
DXi 13 520.26 (DXI 13)	Lifting Axle	Diesel		12777	382	520	08.09-	■	
C II 01.13-					Platform/Chassis				
250P (DTI8-122HQ)	Lifting Axle	Diesel		7698	184	250	01.13-	■	
250P, 250PK (DTI8-122HQ)	Lifting Axle	Diesel		7698	184	250	01.13-	■	
280P (DTI8-122HR)	Lifting Axle	Diesel		7698	206	280	01.13-	■	
280P, 280PK (DTI8-122HR)	Lifting Axle	Diesel		7698	206	280	01.13-	■	
280P, 280PK (DTI8-122HR)	Lifting Axle	Diesel		7698	206	280	01.13-	■	
320P (DTI8-122HS)	Lifting Axle	Diesel		7698	235	320	01.13-	■	
320P, 320PK (DTI8-122HS)	Lifting Axle	Diesel		7698	235	320	01.13-	■	
320P, 320PK (DTI8-122HS)	Lifting Axle	Diesel		7698	235	320	01.13-	■	
380P (DTI11-122HH)	Lifting Axle	Diesel		10837	279	379	01.13-	■	
380P, 380PK (DTI11-122HH)	Lifting Axle	Diesel		10837	279	379	01.13-	■	
380P, 380PK (DTI11-122HH)	Lifting Axle	Diesel		10837	279	379	01.13-	■	
380P, 380PK, 380P XLOAD (DTI11-122HH)	Lifting Axle	Diesel		10837	279	379	01.13-	■	
430P (DTI11-122HI)	Lifting Axle	Diesel		10837	316	430	01.13-	■	

# LISTA DE APLICACIONES - BUYERS GUIDE

430P, 430PK (DTI11-122HI)	Lifting Axle	Diesel		10837	316	430	01.13-	■
430P, 430PK (DTI11-122HI)	Lifting Axle	Diesel		10837	316	430	01.13-	■
430P, 430PK, 430P XLOAD (DTI11-122HI)	Lifting Axle	Diesel		10837	316	430	01.13-	■
460P (DTI11-122HJ)	Lifting Axle	Diesel		10837	338	460	01.13-	■
460P, 460PK (DTI11-122HJ)	Lifting Axle	Diesel		10837	338	460	01.13-	■
460P, 460PK (DTI11-122HJ)	Lifting Axle	Diesel		10837	338	460	01.13-	■
460P, 460PK, 460P XLOAD (DTI11-122HJ)	Lifting Axle	Diesel		10837	338	460	01.13-	■
440P (DTI13-122HK)	Lifting Axle	Diesel		12777	323	439	01.13-	■
440P, 440PK (DTI13-122HK)	Lifting Axle	Diesel		12777	323	439	01.13-	■
440P, 440PK (DTI13-122HK)	Lifting Axle	Diesel		12777	323	439	01.13-	■
440P, 440PK (DTI13-122HK)	Lifting Axle	Diesel		12777	323	439	01.13-	■
480P (DTI13-122HL)	Lifting Axle	Diesel		12777	353	480	01.13-	■
480P, 480PK (DTI13-122HL)	Lifting Axle	Diesel		12777	353	480	01.13-	■
480P, 480PK (DTI13-122HL)	Lifting Axle	Diesel		12777	353	480	01.13-	■
480P, 480PK (DTI13-122HL)	Lifting Axle	Diesel		12777	353	480	01.13-	■
520P (DTI13-122HM)	Lifting Axle	Diesel		12777	382	520	01.13-	■
520P, 520PK (DTI13-122HM)	Lifting Axle	Diesel		12777	382	520	01.13-	■
520P, 520PK (DTI13-122HM)	Lifting Axle	Diesel		12777	382	520	01.13-	■
520P, 520PK (DTI13-122HM)	Lifting Axle	Diesel		12777	382	520	01.13-	■
<b>C II 01.13-</b>					<b>Truck Tractor</b>			
380T, 380TK (DTI11-122HH)	Lifting Axle	Diesel		10837	279	379	01.13-	■
380T, 380TK (DTI11-122HH)	Lifting Axle	Diesel		10837	279	379	01.13-	■
430T, 430TK (DTI11-122HI)	Lifting Axle	Diesel		10837	316	430	01.13-	■
430T, 430TK (DTI11-122HI)	Lifting Axle	Diesel		10837	316	430	01.13-	■
460T, 460TK (DTI11-122HJ)	Lifting Axle	Diesel		10837	338	460	01.13-	■
460T, 460TK (DTI11-122HJ)	Lifting Axle	Diesel		10837	338	460	01.13-	■
440T, 440TK (DTI13-122HK)	Lifting Axle	Diesel		12777	323	439	01.13-	■
440T, 440TK (DTI13-122HK)	Lifting Axle	Diesel		12777	323	439	01.13-	■
480T, 480TK (DTI13-122HL)	Lifting Axle	Diesel		12777	353	480	01.13-	■
480T, 480TK (DTI13-122HL)	Lifting Axle	Diesel		12777	353	480	01.13-	■
520T, 520TK (DTI13-122HM)	Lifting Axle	Diesel		12777	382	520	01.13-	■
520T, 520TK (DTI13-122HM)	Lifting Axle	Diesel		12777	382	520	01.13-	■
<b>Magnum 01.90-04.99</b>					<b>Truck Tractor</b>			
DXi 12 440.26 T (DXI 12)	Lifting Axle	Diesel		12130	324	441	10.04-04.06	■
DXi 12 480.26 T (DXI 12)	Lifting Axle	Diesel		12130	353	480	10.04-04.06	■
<b>Premium 2 10.05-</b>					<b>Platform/Chassis</b>			
Distribution 240.18 D (DXI 7)	Lifting Axle	Diesel		7146	177	241	05.06-	■
Distribution 270.19 (DXI 7)	Lifting Axle	Diesel		7146	194	264	10.06-	■
Lander 270.18, Lander 270.19 (DXI 7)	Lifting Axle	Diesel		7146	194	264	10.06-	■
Distribution 280.18 D (DXI 7)	Lifting Axle	Diesel		7146	206	280	10.05-	■
Distribution 280.26 D (DXI 7)	Lifting Axle	Diesel		7146	206	280	10.05-	■
Distribution 310.18 (DXI 7)	Lifting Axle	Diesel		7146	224	310	10.06-	■
Distribution 310.26 (DXI 7)	Lifting Axle	Diesel		7146	224	310	10.06-	■
Lander 310.19 (DXI 7)	Lifting Axle	Diesel		7146	224	310	10.06-	■
Lander 310.26 (DXI 7)	Lifting Axle	Diesel		7146	224	310	10.06-	■
Lander 310.26 (DXI 7)	Lifting Axle	Diesel		7146	224	310	10.06-	■
Distribution 320.18 D (DXI 7)	Lifting Axle	Diesel		7146	235	320	10.05-	■
Distribution 320.26 (DXI 7)	Lifting Axle	Diesel		7146	235	320	10.05-	■
Distribution 340.18 (DXI 7)	Lifting Axle	Diesel		7146	247	340	10.06-	■
Distribution 340.26 (DXI 7)	Lifting Axle	Diesel		7146	247	340	10.06-	■

# LISTA DE APLICACIONES - BUYERS GUIDE

Lander 340.18, Lander 340.19 (DXI 7)	Lifting Axle	Diesel		7146	247	340	10.06-	■
Lander 340.26 (DXI 7)	Lifting Axle	Diesel		7146	247	340	10.06-	■
Lander 340.26 (DXI 7)	Lifting Axle	Diesel		7146	247	340	10.06-	■
Distribution 370.18D (DXI 11)	Lifting Axle	Diesel		10837	272	370	10.05-	■
Distribution 370.26 (DXI 11)	Lifting Axle	Diesel		10837	272	370	10.05-	■
Distribution 380.18 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Distribution 380.26 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Lander 380.19 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Lander 380.26 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Lander 380.26 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Lander 380.32 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Route 380.18 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Route 380.26 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Distribution 410.18 D (DXI 11)	Lifting Axle	Diesel		10837	302	410	10.05-	■
Distribution 410.26 (DXI 11)	Lifting Axle	Diesel		10837	302	410	10.05-	■
Route 410.18 D (DXI 11)	Lifting Axle	Diesel		10837	302	410	10.05-	■
Route 410.24 (DXI 11)	Lifting Axle	Diesel		10837	302	411	10.05-	■
Route 410.25 (DXI 11)	Lifting Axle	Diesel		10837	302	411	10.05-	■
Route 410.26 (DXI 11)	Lifting Axle	Diesel		10837	302	411	10.05-	■
Distribution 430.18 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Distribution 430.26 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Lander 430.18 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Lander 430.26 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Lander 430.26 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Lander 430.32 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Route 430.18 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Route 430.26 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Lander 440.32 (DXI 11)	01/06-, Lifting Axle	Diesel		10837	324	440	10.05-	■
Distribution 450.18 D (DXI 11)	Lifting Axle	Diesel		10837	331	450	10.05-	■
Route 450.18 D (DXI 11)	Lifting Axle	Diesel		10837	331	450	10.05-	■
Route 450.24 (DXI 11)	Lifting Axle	Diesel		10837	331	450	10.05-	■
Route 450.25 (DXI 11)	Lifting Axle	Diesel		10837	331	450	10.05-	■
Route 450.26 (DXI 11)	Lifting Axle	Diesel		10837	331	450	10.05-	■
Distribution 460.19 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
Lander 460.18 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
Lander 460.26 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
Lander 460.26 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
Lander 460.32 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
Route 460.18 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
Route 460.26 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
<b>Premium 2 10.05-</b>					<b>Truck Tractor</b>			
Distribution 320.19 D (DXI 7)	Lifting Axle	Diesel		7146	235	320	05.06-	■
Distribution 340.19 (DXI 7)	Lifting Axle	Diesel		7146	247	340	10.06-	■
Route 410.25 (DXI 11)	Lifting Axle	Diesel		10800	302	410	10.05-	■
Route 430.26 (DXI 11)	Lifting Axle	Diesel		10800	316	430	10.06-	■
Route 450.25 (DXI 11)	Lifting Axle	Diesel		10800	331	450	10.05-	■
Route 460.26 (DXI 11)	Lifting Axle	Diesel		10800	339	460	10.06-	■
Route 330.18 T (DXI 11)	01/06-, Lifting Axle	Diesel		10837	243	330	10.05-	■
Distribution 370.19 D (DXI 11)	Lifting Axle	Diesel		10837	272	370	10.05-	■
Distribution 380.19 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Lander 380.19 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■

# LISTA DE APLICACIONES - BUYERS GUIDE

Route 380.19 (DXI 11)	Lifting Axle	Diesel		10837	280	381	10.06-	■
Distribution 410.19 D (DXI 11)	Lifting Axle	Diesel		10837	302	410	10.05-	■
Route 410.18 (DXI 11)	Lifting Axle	Diesel		10837	302	410	10.05-	■
Distribution 430.19 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Lander 430.18 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Lander 430.26 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Route 430.19 (DXI 11)	Lifting Axle	Diesel		10837	316	430	10.06-	■
Lander 440.18 (DXI 11)	01/06-, Lifting Axle	Diesel		10837	324	440	10.05-	■
Lander 440.19 (DXI 11)	01/06-, Lifting Axle	Diesel		10837	324	440	10.05-	■
Lander 440.26	01/06-, Lifting Axle	Diesel		10837	324	440	10.05-	■
Route 450.18 (DXI 11)	Lifting Axle	Diesel		10837	331	450	10.05-	■
Distribution 460.19 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
Lander 460.18 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
Lander 460.26 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
Route 460.18 (DXI 11)	Lifting Axle	Diesel		10837	339	460	10.06-	■
VOLVO								
FE 05.06-					Dump Truck			
FE 240-18 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-26 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-26 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 280-18 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 280-26 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 280-26 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 320-18 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 320-26 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 320-26 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 05.06-					Municipal Vehicle			
FE 240-18 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-18 (D7F240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 260-18 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.06-	■
FE 260-26 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.06-	■
FE 280-18 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 280-26 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 300-18 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.06-	■
FE 300-26 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.06-	■
FE 320-18 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 320-26 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 340-18 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.06-	■
FE 340-26 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.06-	■
FE 05.06-					Platform/Chassis			
FE 240-18 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-18 (D7F240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-22 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-26 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-26 (D7F240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-26 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-26 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 240-26 (D7F240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 260-18 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.06-	■
FE 260-26 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.06-	■

# LISTA DE APLICACIONES - BUYERS GUIDE

FE 260-26 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.06-	■
FE 260-26 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.06-	■
FE 280-18 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 280-22 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 280-26 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 280-26 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 280-26 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 300-18 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.06-	■
FE 300-26 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.06-	■
FE 300-26 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.06-	■
FE 300-26 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.06-	■
FE 320-18 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 320-22 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 320-26 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 320-26 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 320-26 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 340-18 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.06-	■
FE 340-26 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.06-	■
FE 340-26 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.06-	■
FE 340-26 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.06-	■
<b>FE 05.06-</b>					<b>Truck Tractor</b>			
FE 240-18 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.06-	■
FE 260-18 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.06-	■
FE 280-18 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.06-	■
FE 300-18 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.06-	■
FE 320-18 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.06-	■
FE 340-18 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.06-	■
<b>FE II 05.12-</b>					<b>Municipal Vehicle</b>			
FE 240-18 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.12-	■
FE 240-18 (D7F240)	Lifting Axle	Diesel		7146	177	240	05.12-	■
FE 260-18 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.12-	■
FE 260-26 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.12-	■
FE 280-18 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.12-	■
FE 280-26 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.12-	■
FE 300-18 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.12-	■
FE 300-26 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.12-	■
FE 320-18 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.12-	■
FE 320-26 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.12-	■
FE 340-18 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.12-	■
FE 340-26 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.12-	■
<b>FE II 05.12-</b>					<b>Platform/Chassis</b>			
FE 240-18 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.12-	■
FE 240-18 (D7F240)	Lifting Axle	Diesel		7146	177	240	05.12-	■
FE 240-26 (D7E240)	Lifting Axle	Diesel		7146	177	240	05.12-	■
FE 240-26 (D7F240)	Lifting Axle	Diesel		7146	177	240	05.12-	■
FE 260-18 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.12-	■
FE 260-26 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.12-	■
FE 260-26 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.12-	■
FE 280-18 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.12-	■
FE 280-26 (D7E280)	Lifting Axle	Diesel		7146	206	280	05.12-	■

# LISTA DE APLICACIONES - BUYERS GUIDE

FE 300-18 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.12-	■
FE 300-26 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.12-	■
FE 300-26 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.12-	■
FE 320-18 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.12-	■
FE 320-26 (D7E320)	Lifting Axle	Diesel		7146	235	320	05.12-	■
FE 340-18 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.12-	■
FE 340-26 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.12-	■
FE 340-26 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.12-	■
FE 250-18 (D8K250)	Lifting Axle	Diesel		7698	184	250	05.12-	■
FE 250-26 (D8K250)	Lifting Axle	Diesel		7698	184	250	05.12-	■
FE 280-18 (D8K280)	Lifting Axle	Diesel		7698	206	280	05.12-	■
FE 280-26 (D8K280)	Lifting Axle	Diesel		7698	206	280	05.12-	■
FE 280-26 (D8K280)	Lifting Axle	Diesel		7698	206	280	05.12-	■
FE 320-18 (D8K320)	Lifting Axle	Diesel		7698	235	320	05.12-	■
FE 320-26 (D8K320)	Lifting Axle	Diesel		7698	235	320	05.12-	■
FE 320-26 (D8K320)	Lifting Axle	Diesel		7698	235	320	05.12-	■
<b>FE II 05.12-</b>					<b>Truck Tractor</b>			
FE 260-18 (D7F260)	Lifting Axle	Diesel		7146	191	260	05.12-	■
FE 300-18 (D7F300)	Lifting Axle	Diesel		7146	221	300	05.12-	■
FE 340-18 (D7F340)	Lifting Axle	Diesel		7146	250	340	05.12-	■
FE 280-18 (D8K280)	Lifting Axle	Diesel		7698	206	280	05.12-	■
FE 320-18 (D8K320)	Lifting Axle	Diesel		7698	235	320	05.12-	■
<b>FH 09.05-</b>					<b>Platform/Chassis</b>			
400 (D13A400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13B400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13A400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13B400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13A400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13B400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13A400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13B400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13A400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13B400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13A400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13B400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13A400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
400 (D13B400)	Lifting Axle	Diesel		12777	294	400	09.05-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.09-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.09-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.09-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.09-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.09-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.09-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.09-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.09-	■
440 (D13A440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
440 (D13B440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
440 (D13A440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
440 (D13B440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
440 (D13A440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
440 (D13B440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
440 (D13H440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
440 (D13A440)	Lifting Axle	Diesel		12777	324	440	09.05-	■

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]



## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

# LISTA DE APLICACIONES - BUYERS GUIDE

500 (D13K500)	Lifting Axle	Diesel		12800	368	500	01.12-	■
500	Lifting Axle	Diesel		12800	368	500	09.12-	■
<b>FH II 01.12-</b>					<b>Truck Tractor</b>			
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.12-	■
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	01.12-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	01.12-	■
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	01.12-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	05.12-	■
420	Lifting Axle	Diesel		12777	309	420	01.12-	■
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	05.12-	■
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	05.12-	■
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	01.12-	■
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	01.12-	■
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	05.12-	■
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	05.12-	■
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	05.12-	■
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	05.12-	■
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	01.12-	■
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	01.12-	■
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	05.12-	■
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	05.12-	■
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	05.12-	■
460	Lifting Axle	Diesel		12777	338	460	01.12-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	05.12-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	05.12-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	01.12-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	01.12-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	05.12-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	05.12-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	05.12-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	05.12-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	01.12-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	01.12-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	05.12-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	05.12-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	05.12-	■
500	Lifting Axle	Diesel		12777	368	500	01.12-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	01.12-	■
500	Lifting Axle	Diesel		12777	368	500	09.12-	■
540 (D13C540)	Lifting Axle	Diesel		12777	397	540	05.12-	■

# LISTA DE APLICACIONES - BUYERS GUIDE

540 (D13K540)	Lifting Axle	Diesel		12777	397	540	05.12-	■
540 (D13C540)	Lifting Axle	Diesel		12777	397	540	01.12-	■
540 (D13K540)	Lifting Axle	Diesel		12777	397	540	01.12-	■
540 (D13C540)	Lifting Axle	Diesel		12777	397	540	05.12-	■
540 (D13K540)	Lifting Axle	Diesel		12777	397	540	05.12-	■
540 (D13C540)	Lifting Axle	Diesel		12777	397	540	05.12-	■
540 (D13K540)	Lifting Axle	Diesel		12777	397	540	05.12-	■
540 (D13C540)	Lifting Axle	Diesel		12777	397	540	01.12-	■
540 (D13K540)	Lifting Axle	Diesel		12777	397	540	01.12-	■
540 (D13C540)	Lifting Axle	Diesel		12777	397	540	05.12-	■
540 (D13K540)	Lifting Axle	Diesel		12777	397	540	05.12-	■
540 (D13C540)	Lifting Axle	Diesel		12777	397	540	05.12-	■
540 (D13K540)	Lifting Axle	Diesel		12777	397	540	05.12-	■
540	Lifting Axle	Diesel		12777	397	540	01.12-	■
<b>FH16 08.93-</b>					<b>Platform/Chassis</b>			
FH 16/540 (D16G540)	Lifting Axle	Diesel		16120	396	540	01.09-	■
FH 16/540 (D16E540)	Lifting Axle	Diesel		16120	396	539	01.09-	■
FH 16/540 (D16G540)	Lifting Axle	Diesel		16120	396	539	01.09-	■
FH 16/540 (D16E540)	Lifting Axle	Diesel		16120	396	539	01.09-	■
FH 16/540 (D16G540)	Lifting Axle	Diesel		16120	396	539	01.09-	■
FH 16/540 (D16E540)	Lifting Axle	Diesel		16120	396	539	01.09-	■
FH 16/540 (D16G540)	Lifting Axle	Diesel		16120	396	539	01.09-	■
FH 16/580 (D16E580)	Lifting Axle	Diesel		16120	426	580	09.06-	■
FH 16/580 (D16E580)	Lifting Axle	Diesel		16120	426	580	09.06-	■
FH 16/580 (D16E580)	Lifting Axle	Diesel		16120	426	580	09.06-	■
FH 16/580 (D16E580)	Lifting Axle	Diesel		16120	426	580	09.06-	■
FH 16/580 (D16E580)	Lifting Axle	Diesel		16120	426	580	09.06-	■
FH 16/580 (D16E580)	Lifting Axle	Diesel		16120	426	580	01.09-	■
FH 16/580 (D16E580)	Lifting Axle	Diesel		16120	426	580	01.09-	■
FH 16/580 (D16E580)	Lifting Axle	Diesel		16120	426	580	01.09-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	09.06-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	01.09-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	01.09-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	01.09-	■
FH 16/660 (D16E660)	Lifting Axle	Diesel		16120	485	660	09.06-	■
FH 16/660 (D16E660)	Lifting Axle	Diesel		16120	485	660	09.06-	■
FH 16/660 (D16E660)	Lifting Axle	Diesel		16120	485	660	09.06-	■
FH 16/660 (D16E660)	Lifting Axle	Diesel		16120	485	660	09.06-	■
FH 16/660 (D16E660)	Lifting Axle	Diesel		16120	485	660	09.06-	■
FH 16/660 (D16E660)	Lifting Axle	Diesel		16120	485	660	01.09-	■
FH 16/660 (D16E660)	Lifting Axle	Diesel		16120	485	660	01.09-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	01.09-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	01.09-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	01.09-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	01.09-	■
<b>FH16 08.93-</b>					<b>Truck Tractor</b>			
FH 16/540 (D16E540)	Lifting Axle	Diesel		16120	396	539	01.09-	■
FH 16/540 (D16G540)	Lifting Axle	Diesel		16120	396	539	01.09-	■
FH 16/540, FH 16/550 (D16C550)	Lifting Axle	Diesel		16120	396	539	08.07-	■
FH 16/540, FH 16/550 (D16G540)	Lifting Axle	Diesel		16120	396	539	08.07-	■
FH 16/550 (D16C550)	Lifting Axle	Diesel		16120	404	550	09.05-	■

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

# LISTA DE APLICACIONES - BUYERS GUIDE

FH 16/540, FH 16/550 (D16G540)	Lifting Axle	Diesel		16120	396	540	05.12-	■
FH 16/540, FH 16/550 (D16G540)	Lifting Axle	Diesel		16120	396	540	05.12-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	05.12-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	05.12-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	05.12-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	05.12-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	05.12-	■
FH 16/600 (D16G600)	Lifting Axle	Diesel		16120	441	600	05.12-	■
FH 16/650 (D16K650)	Lifting Axle	Diesel		16120	479	650	03.14-	■
FH 16/650 (D16K650)	Lifting Axle	Diesel		16120	479	650	03.14-	■
FH 16/650 (D16K650)	Lifting Axle	Diesel		16120	479	650	03.14-	■
FH 16/650 (D16K650)	Lifting Axle	Diesel		16120	479	650	03.14-	■
FH 16/650 (D16K650)	Lifting Axle	Diesel		16120	479	650	03.14-	■
FH 16/650 (D16K650)	Lifting Axle	Diesel		16120	479	650	03.14-	■
FH 16/650 (D16K650)	Lifting Axle	Diesel		16120	479	650	03.14-	■
FH 16/650 (D16K650)	Lifting Axle	Diesel		16120	479	651	03.14-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	05.12-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	05.12-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	05.12-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	05.12-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	05.12-	■
FH 16/700 (D16G700)	Lifting Axle	Diesel		16120	515	700	05.12-	■
FH 16/750 (D16G750)	Lifting Axle	Diesel		16120	551	750	05.12-	■
FH 16/750 (D16G750)	Lifting Axle	Diesel		16120	551	750	05.12-	■
FH 16/750 (D16G750)	Lifting Axle	Diesel		16120	551	750	05.12-	■
FH 16/750 (D16G750)	Lifting Axle	Diesel		16120	551	750	05.12-	■
FH 16/750 (D16G750)	Lifting Axle	Diesel		16120	551	750	05.12-	■
FH 16/750 (D16G750)	Lifting Axle	Diesel		16120	551	750	05.12-	■
FH 16/750 (D16K750)	Lifting Axle	Diesel		16120	551	750	05.12-	■
<b>FM 09.05-</b>					<b>Dump Truck</b>			
FM 300 (D9A300)	Lifting Axle	Diesel		9364	220	300	09.05-	■
FM 300 (D9B300)	Lifting Axle	Diesel		9364	220	300	09.05-	■
FM 300 (D9B300)	Lifting Axle	Diesel		9364	221	300	09.05-	■
FM 300 (D9B300)	Lifting Axle	Diesel		9364	221	300	09.05-	■
FM 300 (D9B300)	Lifting Axle	Diesel		9364	221	300	09.05-	■
FM 340 (D9B340)	Lifting Axle	Diesel		9364	250	340	09.05-	■
FM 340 (D9B340)	Lifting Axle	Diesel		9364	250	340	09.05-	■
FM 340 (D9B340)	Lifting Axle	Diesel		9364	250	340	09.05-	■
FM 340 (D9B340)	Lifting Axle	Diesel		9364	250	340	09.05-	■
FM 380 (D9B380)	Lifting Axle	Diesel		9364	279	380	09.05-	■
FM 380 (D9B380)	Lifting Axle	Diesel		9364	280	380	09.05-	■
FM 380 (D9B380)	Lifting Axle	Diesel		9364	280	380	09.05-	■
FM 380 (D9B380)	Lifting Axle	Diesel		9364	280	380	09.05-	■
FM 330 (D11C330)	Lifting Axle	Diesel		10837	243	330	09.05-	■
FM 330 (D11C330)	Lifting Axle	Diesel		10837	243	330	09.05-	■
FM 330 (D11C330)	Lifting Axle	Diesel		10837	243	330	09.05-	■
FM 330 (D11C330)	Lifting Axle	Diesel		10837	243	330	09.05-	■
FM 370 (D11C370)	Lifting Axle	Diesel		10837	272	370	09.05-	■
FM 370 (D11C370)	Lifting Axle	Diesel		10837	272	370	09.05-	■
FM 370 (D11C370)	Lifting Axle	Diesel		10837	272	370	09.05-	■
FM 370 (D11C370)	Lifting Axle	Diesel		10837	272	370	09.05-	■

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]



## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

# LISTA DE APLICACIONES - BUYERS GUIDE

FM 440 (D13B440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
FM 440 (D13A440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
FM 440 (D13B440)	Lifting Axle	Diesel		12777	324	440	09.05-	■
FM 460 (D13C460)	Lifting Axle	Diesel		12777	338	460	09.05-	■
FM 460 (D13C460)	Lifting Axle	Diesel		12777	338	460	09.05-	■
FM 460 (D13C460)	Lifting Axle	Diesel		12777	338	460	09.05-	■
FM 460 (D13K460)	Lifting Axle	Diesel		12777	338	460	09.05-	■
FM 460 (D13C460)	Lifting Axle	Diesel		12777	338	460	09.05-	■
FM 460 (D13C460)	Lifting Axle	Diesel		12777	338	460	09.05-	■
FM 460 (D13C460)	Lifting Axle	Diesel		12777	338	460	09.05-	■
FM 480 (D13A480)	Lifting Axle	Diesel		12777	353	480	09.05-	■
FM 480 (D13A480)	Lifting Axle	Diesel		12777	353	480	09.05-	■
FM 480 (D13A480)	Lifting Axle	Diesel		12777	353	480	09.05-	■
FM 480 (D13A480)	Lifting Axle	Diesel		12777	353	480	09.05-	■
FM 480 (D13A480)	Lifting Axle	Diesel		12777	353	480	09.05-	■
FM 480 (D13A480)	Lifting Axle	Diesel		12777	353	480	09.05-	■
FM 480 (D13A480)	Lifting Axle	Diesel		12777	353	480	09.05-	■
FM 480 (D13A480)	Lifting Axle	Diesel		12777	353	480	09.05-	■
FM 500 (D13B500)	Lifting Axle	Diesel		12777	368	500	09.05-	■
FM 500 (D13C500)	Lifting Axle	Diesel		12777	368	500	09.05-	■
FM 500 (D13C500)	Lifting Axle	Diesel		12777	368	500	09.05-	■
FM 500 (D13C500)	Lifting Axle	Diesel		12777	368	500	09.05-	■
FM 500 (D13C500)	Lifting Axle	Diesel		12777	368	500	09.05-	■
FM 500 (D13C500)	Lifting Axle	Diesel		12777	368	500	09.05-	■
FM 440	Lifting Axle	Diesel		12800	324	440	09.05-	■
<b>FM 09.05-</b>					<b>Truck Tractor</b>			
FM 300 (D9B300)	Lifting Axle	Diesel		9364	221	300	09.05-	■
FM 300 (D9B300)	Lifting Axle	Diesel		9364	221	300	09.05-	■
FM 300 (D9B300)	Lifting Axle	Diesel		9364	221	300	09.05-	■
FM 340 (D9B340)	Lifting Axle	Diesel		9364	250	340	09.05-	■
FM 340 (D9B340)	Lifting Axle	Diesel		9364	250	340	09.05-	■
FM 340 (D9B340)	Lifting Axle	Diesel		9364	250	340	09.05-	■
FM 340 (D9B340)	Lifting Axle	Diesel		9364	250	340	09.05-	■
FM 380 (D9B380)	Lifting Axle	Diesel		9364	280	380	09.05-	■
FM 380 (D9B380)	Lifting Axle	Diesel		9364	280	380	09.05-	■
FM 380 (D9B380)	Lifting Axle	Diesel		9364	280	380	09.05-	■
FM 380 (D9B380)	Lifting Axle	Diesel		9364	280	380	09.05-	■
FM 330 (D11C330)	Lifting Axle	Diesel		10837	243	330	09.05-	■
FM 330 (D11C330)	Lifting Axle	Diesel		10837	243	330	09.05-	■
FM 330 (D11C330)	Lifting Axle	Diesel		10837	243	330	09.05-	■
FM 330 (D11C330)	Lifting Axle	Diesel		10837	243	330	09.05-	■
FM 330 (D11C330)	Lifting Axle	Diesel		10837	243	330	09.05-	■
FM 370 (D11C370)	Lifting Axle	Diesel		10837	272	370	09.05-	■
FM 370 (D11C370)	Lifting Axle	Diesel		10837	272	370	09.05-	■
FM 370 (D11C370)	Lifting Axle	Diesel		10837	272	370	09.05-	■
FM 370 (D11C370)	Lifting Axle	Diesel		10837	272	370	09.05-	■
FM 370 (D11C370)	Lifting Axle	Diesel		10837	272	370	09.05-	■
FM 390 (D11B390)	Lifting Axle	Diesel		10837	287	390	06.08-	■
FM 390 (D11B390)	Lifting Axle	Diesel		10837	287	390	06.08-	■
FM 390 (D11B390)	Lifting Axle	Diesel		10837	287	390	06.08-	■
FM 410 (D11C410)	Lifting Axle	Diesel		10837	302	410	09.05-	■
FM 410 (D11C410)	Lifting Axle	Diesel		10837	302	410	09.05-	■

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]



## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

# LISTA DE APLICACIONES - BUYERS GUIDE

500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
380 (D13C380)	Lifting Axle	Diesel		12800	280	380	04.10-	■
400 (D13B400)	Lifting Axle	Diesel		12800	294	400	04.10-	■
420 (D13C420)	Lifting Axle	Diesel		12800	309	420	04.10-	■
420 (D13K420)	Lifting Axle	Diesel		12800	309	420	04.10-	■
440 (D13H440)	Lifting Axle	Diesel		12800	323	439	04.10-	■
460 (D13C460)	Lifting Axle	Diesel		12800	338	460	04.10-	■
460 (D13K460)	Lifting Axle	Diesel		12800	338	460	04.10-	■
480 (D13A480)	Lifting Axle	Diesel		12800	353	480	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12800	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12800	368	500	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
FMX 04.10-					Truck Tractor			
330 (D11C330)	Lifting Axle	Diesel		10837	243	330	04.10-	■
330 (D11K330)	Lifting Axle	Diesel		10837	243	330	04.10-	■
330 (D11C330)	Lifting Axle	Diesel		10837	243	330	04.10-	■
330 (D11K330)	Lifting Axle	Diesel		10837	243	330	04.10-	■
330 (D11C330)	Lifting Axle	Diesel		10837	243	330	04.10-	■
330 (D11K330)	Lifting Axle	Diesel		10837	243	330	04.10-	■
330 (D11C330)	Lifting Axle	Diesel		10837	243	330	04.10-	■
330 (D11K330)	Lifting Axle	Diesel		10837	243	330	04.10-	■
330 (D11C330)	Lifting Axle	Diesel		10837	243	330	04.10-	■
330 (D11K330)	Lifting Axle	Diesel		10837	243	330	04.10-	■

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]



# LISTA DE APLICACIONES - BUYERS GUIDE

450 (D11K450)	Lifting Axle	Diesel		10837	332	450	04.10-
450 (D11C450)	Lifting Axle	Diesel		10837	332	450	04.10-
450 (D11K450)	Lifting Axle	Diesel		10837	332	450	04.10-
330 (D11C330)	Lifting Axle	Diesel		10840	243	330	04.10-
330 (D11K330)	Lifting Axle	Diesel		10840	243	330	04.10-
370 (D11C370)	Lifting Axle	Diesel		10840	272	370	04.10-
370 (D11K370)	Lifting Axle	Diesel		10840	272	370	04.10-
410 (D11C410)	Lifting Axle	Diesel		10840	302	410	04.10-
410 (D11K410)	Lifting Axle	Diesel		10840	302	410	04.10-
450 (D11C450)	Lifting Axle	Diesel		10840	332	450	04.10-
450 (D11K450)	Lifting Axle	Diesel		10840	332	450	04.10-
380 (D13C380)	Lifting Axle	Diesel		12777	280	380	04.10-
380 (D13C380)	Lifting Axle	Diesel		12777	280	380	04.10-
380 (D13C380)	Lifting Axle	Diesel		12777	280	380	04.10-
380 (D13C380)	Lifting Axle	Diesel		12777	280	380	04.10-
380 (D13C380)	Lifting Axle	Diesel		12777	280	380	04.10-
380 (D13C380)	Lifting Axle	Diesel		12777	280	380	04.10-
380 (D13C380)	Lifting Axle	Diesel		12777	280	380	04.10-
380 (D13C380)	Lifting Axle	Diesel		12777	280	380	04.10-
400 (D13B400)	Lifting Axle	Diesel		12777	294	400	04.10-
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13C420)	Lifting Axle	Diesel		12777	309	420	04.10-
420 (D13K420)	Lifting Axle	Diesel		12777	309	420	04.10-
440 (D13A440)	Lifting Axle	Diesel		12777	324	440	04.10-
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13C460)	Lifting Axle	Diesel		12777	338	460	04.10-
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	04.10-

# LISTA DE APLICACIONES - BUYERS GUIDE

460 (D13C460)	Lifting Axle	Diesel		12777	338	460	04.10-	■
460 (D13K460)	Lifting Axle	Diesel		12777	338	460	04.10-	■
480 (D13A480)	Lifting Axle	Diesel		12777	353	480	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12777	368	500	04.10-	■
380 (D13C380)	Lifting Axle	Diesel		12800	280	380	04.10-	■
420 (D13C420)	Lifting Axle	Diesel		12800	309	420	04.10-	■
420 (D13K420)	Lifting Axle	Diesel		12800	309	420	04.10-	■
460 (D13C460)	Lifting Axle	Diesel		12800	338	460	04.10-	■
460 (D13K460)	Lifting Axle	Diesel		12800	338	460	04.10-	■
500 (D13C500)	Lifting Axle	Diesel		12800	368	500	04.10-	■
500 (D13K500)	Lifting Axle	Diesel		12800	368	500	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
540 (D13K540)	Lifting Axle	Diesel		12800	397	540	04.10-	■
<b>FMX II 04.12-</b>					<b>Dump Truck</b>			
330	Lifting Axle	Diesel		10837	243	330	04.12-	■
330	Lifting Axle	Diesel		10837	243	330	04.12-	■
330	Lifting Axle	Diesel		10837	243	330	04.12-	■
330	Lifting Axle	Diesel		10837	243	330	09.13-	■
330	Lifting Axle	Diesel		10837	243	330	09.13-	■
330	Lifting Axle	Diesel		10837	243	330	09.13-	■
330	Lifting Axle	Diesel		10837	243	330	09.13-	■
370	Lifting Axle	Diesel		10837	272	370	09.13-	■
370	Lifting Axle	Diesel		10837	272	370	09.13-	■
370	Lifting Axle	Diesel		10837	272	370	09.13-	■
370	Lifting Axle	Diesel		10837	272	370	09.13-	■
370	Lifting Axle	Diesel		10837	272	370	09.13-	■
370	Lifting Axle	Diesel		10837	272	370	09.13-	■
370	Lifting Axle	Diesel		10837	272	370	09.13-	■
410	Lifting Axle	Diesel		10837	302	410	09.13-	■

# LISTA DE APLICACIONES - BUYERS GUIDE

410	Lifting Axle	Diesel		10837	302	410	09.13-	■
410	Lifting Axle	Diesel		10837	302	410	09.13-	■
410	Lifting Axle	Diesel		10837	302	410	09.13-	■
410	Lifting Axle	Diesel		10837	302	410	09.13-	■
410	Lifting Axle	Diesel		10837	302	410	09.13-	■
410	Lifting Axle	Diesel		10837	302	410	09.13-	■
450	Lifting Axle	Diesel		10837	332	450	09.13-	■
450	Lifting Axle	Diesel		10837	332	450	09.13-	■
450	Lifting Axle	Diesel		10837	332	450	09.13-	■
450	Lifting Axle	Diesel		10837	332	450	09.13-	■
450	Lifting Axle	Diesel		10837	332	450	09.13-	■
450	Lifting Axle	Diesel		10837	332	450	09.13-	■
450	Lifting Axle	Diesel		10837	332	450	09.13-	■
380 (D11K330)	Lifting Axle	Diesel		10840	243	330	04.12-	■
420	Lifting Axle	Diesel		12777	309	420	09.13-	■
420	Lifting Axle	Diesel		12777	309	420	09.13-	■
420	Lifting Axle	Diesel		12777	309	420	09.13-	■
420	Lifting Axle	Diesel		12777	309	420	09.13-	■
420	Lifting Axle	Diesel		12777	309	420	09.13-	■
420	Lifting Axle	Diesel		12777	309	420	09.13-	■
420	Lifting Axle	Diesel		12777	309	420	09.13-	■
420	Lifting Axle	Diesel		12777	309	420	09.13-	■
460	Lifting Axle	Diesel		12777	338	460	09.13-	■
460	Lifting Axle	Diesel		12777	338	460	09.13-	■
460	Lifting Axle	Diesel		12777	338	460	09.13-	■
460	Lifting Axle	Diesel		12777	338	460	09.13-	■
460	Lifting Axle	Diesel		12777	338	460	09.13-	■
460	Lifting Axle	Diesel		12777	338	460	09.13-	■
460	Lifting Axle	Diesel		12777	338	460	09.13-	■
500	Lifting Axle	Diesel		12777	368	500	09.13-	■
500	Lifting Axle	Diesel		12777	368	500	09.13-	■
500	Lifting Axle	Diesel		12777	368	500	09.13-	■
500	Lifting Axle	Diesel		12777	368	500	09.13-	■
500	Lifting Axle	Diesel		12777	368	500	09.13-	■
500	Lifting Axle	Diesel		12777	368	500	09.13-	■
500	Lifting Axle	Diesel		12777	368	500	09.13-	■
540 (D13K540)	Lifting Axle	Diesel		12777	397	540	09.13-	■
540	Lifting Axle	Diesel		12777	397	540	09.13-	■
540 (D13K540)	Lifting Axle	Diesel		12777	397	540	09.13-	■
540	Lifting Axle	Diesel		12777	397	540	09.13-	■
540	Lifting Axle	Diesel		12777	397	540	09.13-	■
540	Lifting Axle	Diesel		12777	397	540	09.13-	■
540	Lifting Axle	Diesel		12777	397	540	09.13-	■
<b>FMX II 04.12-</b>					<b>Platform/Chassis</b>			
330	Lifting Axle	Diesel		10837	243	330	04.12-	■
330	Lifting Axle	Diesel		10837	243	330	04.12-	■
330	Lifting Axle	Diesel		10837	243	330	04.12-	■
330	Lifting Axle	Diesel		10837	243	330	04.12-	■
330	Lifting Axle	Diesel		10837	243	330	09.13-	■
330	Lifting Axle	Diesel		10837	243	330	09.13-	■
330	Lifting Axle	Diesel		10837	243	330	09.13-	■
330	Lifting Axle	Diesel		10837	243	330	09.13-	■

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

## LISTA DE APLICACIONES - BUYERS GUIDE

540	Lifting Axle	Diesel		12777	397	540	09.13-
540	Lifting Axle	Diesel		12777	397	540	09.13-
540	Lifting Axle	Diesel		12777	397	540	09.13-
540	Lifting Axle	Diesel		12777	397	540	09.13-
540 (D13K540)	Lifting Axle	Diesel		12777	397	540	09.13-
540	Lifting Axle	Diesel		12777	397	540	09.13-
540	Lifting Axle	Diesel		12777	397	540	09.13-
540	Lifting Axle	Diesel		12777	397	540	09.13-
540	Lifting Axle	Diesel		12777	397	540	09.13-
540	Lifting Axle	Diesel		12777	397	540	09.13-

