



LISTA DE APLICACIONES - BUYERS GUIDE

21 9010 00



Qty: 850

Weight: 8.900

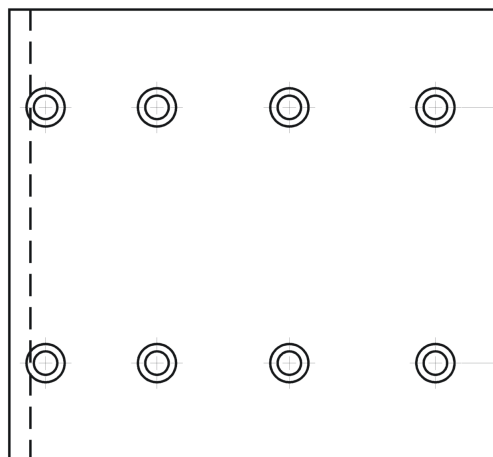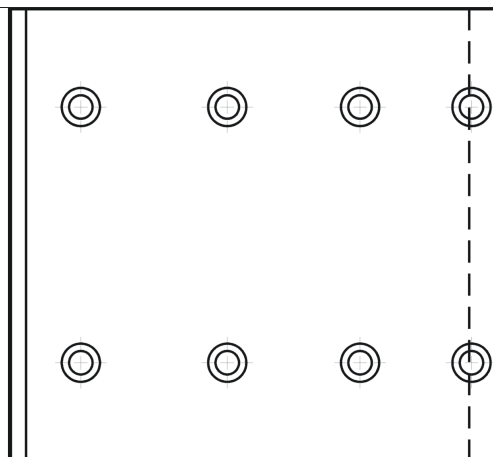

85.00

32.50

21 9010 00



150x21.2/21.3x179.2/175.6- Ø420

WVA

19010

19011

MAKE

DAF



Trac.

CC

Kw

CV



Front / Rear

DAF

65 01.93-02.98

Platform/Chassis

FAV 65.180	01/93-, Auxiliary Axle	Diesel		6195	133	181	01.93-	■
FAV 65.180	01/93-, Auxiliary Axle	Diesel		6195	133	181	01.93-	■
FAV 65.210	01/93-, Auxiliary Axle	Diesel		6195	156	212	01.93-	■
FAV 65.210	01/93-, Auxiliary Axle	Diesel		6195	156	212	01.93-	■
FA 65.180 (NS 133 L)		Diesel		6240	133	181	03.93-02.98	■
FA 65.180 (NS 133 L)	Auxiliary Axle	Diesel		6240	133	181	03.93-02.98	■
FA 65.180 (NS 133 L)		Diesel		6240	133	181	03.93-02.98	■
FA 65.180 (NS 133 L)	Auxiliary Axle	Diesel		6240	133	181	03.93-02.98	■
FA 65.180 (NS 133 M)		Diesel		6240	133	181	03.93-02.98	■
FA 65.180 (NS 133 M)	Auxiliary Axle	Diesel		6240	133	181	03.93-02.98	■
FA 65.180 (NS 133 M)		Diesel		6240	133	181	03.93-02.98	■
FA 65.180 (NS 133 M)	Auxiliary Axle	Diesel		6240	133	181	03.93-02.98	■
FAV 65.180 (NS 133 L)		Diesel		6240	133	181	03.93-02.98	■
FAV 65.180 (NS 133 L)		Diesel		6240	133	181	03.93-02.98	■
FAV 65.180 (NS 133 M)		Diesel		6240	133	181	03.93-02.98	■
FAV 65.180 (NS 133 M)		Diesel		6240	133	181	03.93-02.98	■
FA 65.210 (NS 156 L)		Diesel		6240	156	212	03.93-02.98	■
FA 65.210 (NS 156 L)	Auxiliary Axle	Diesel		6240	156	212	03.93-02.98	■
FA 65.210 (NS 156 L)		Diesel		6240	156	212	03.93-02.98	■
FA 65.210 (NS 156 L)	Auxiliary Axle	Diesel		6240	156	212	03.93-02.98	■
FA 65.210 (NS 156 M)		Diesel		6240	156	212	03.93-02.98	■
FA 65.210 (NS 156 M)	Auxiliary Axle	Diesel		6240	156	212	03.93-02.98	■
FA 65.210 (NS 156 M)		Diesel		6240	156	212	03.93-02.98	■

LISTA DE APLICACIONES - BUYERS GUIDE

FA 65.210 (NS 156 M)	Auxiliary Axle	Diesel		6240	156	212	03.93-02.98		■
FAV 65.210 (NS 156 L)		Diesel		6240	156	212	03.93-02.98	■	
FAV 65.210 (NS 156 L)		Diesel		6240	156	212	03.93-02.98	■	
FAV 65.210 (NS 156 M)		Diesel		6240	156	212	03.93-02.98	■	
FAV 65.210 (NS 156 M)		Diesel		6240	156	212	03.93-02.98	■	
FA 65.240 (NS 177 M)		Diesel		6240	177	241	05.96-02.98	■	
FA 65.240 (NS 177 M)	Auxiliary Axle	Diesel		6240	177	241	05.96-02.98		■
FA 65.240 (NS 177 M)		Diesel		6240	177	241	05.96-02.98	■	
FA 65.240 (NS 177 M)	Auxiliary Axle	Diesel		6240	177	241	05.96-02.98		■
FAG 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	01.93-		■
FAG 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	01.93-		■
FAR 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	01.93-		■
FAR 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	01.93-		■
FAS 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	01.93-		■
FAS 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	01.93-		■
FAG 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	01.93-		■
FAG 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	01.93-		■
FAR 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	01.93-		■
FAR 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	01.93-		■
FAS 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	01.93-		■
FAS 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	01.93-		■
75 07.92-02.98					Platform/Chassis				
FA 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FA 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FAG 75.240	01/92-, Auxiliary Axle	Diesel		8695	180	245	07.92-		■
FAG 75.240	01/92-, Auxiliary Axle	Diesel		8695	180	245	07.92-		■
FAN 75.240	01/92-, Auxiliary Axle	Diesel		8695	180	245	07.92-		■
FAN 75.240	01/92-, Auxiliary Axle	Diesel		8695	180	245	07.92-		■
FAR 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FAR 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FAR 75.240	01/92-, Auxiliary Axle	Diesel		8695	180	245	07.92-		■
FAR 75.240	01/92-, Auxiliary Axle	Diesel		8695	180	245	07.92-		■
FAS 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FAS 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FAS 75.240	01/92-, Auxiliary Axle	Diesel		8695	180	245	07.92-		■
FAS 75.240	01/92-, Auxiliary Axle	Diesel		8695	180	245	07.92-		■
FAV 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FAV 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FT 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FT 75.240	01/92-	Diesel		8695	180	245	07.92-	■	
FA 75.270	01/92-	Diesel		8695	200	272	07.92-	■	
FA 75.270	01/92-	Diesel		8695	200	272	07.92-	■	
FAG 75.270	01/92-, Auxiliary Axle	Diesel		8695	200	272	07.92-		■
FAG 75.270	01/92-, Auxiliary Axle	Diesel		8695	200	272	07.92-		■
FAN 75.270	01/92-, Auxiliary Axle	Diesel		8695	200	272	07.92-		■
FAN 75.270	01/92-, Auxiliary Axle	Diesel		8695	200	272	07.92-		■
FAR 75.270	01/92-	Diesel		8695	200	272	07.92-	■	
FAR 75.270	01/92-	Diesel		8695	200	272	07.92-	■	
FAR 75.270	01/92-, Auxiliary Axle	Diesel		8695	200	272	07.92-		■
FAR 75.270	01/92-, Auxiliary Axle	Diesel		8695	200	272	07.92-		■
FAS 75.270	01/92-	Diesel		8695	200	272	07.92-	■	

LISTA DE APLICACIONES - BUYERS GUIDE

FAS 75.270	01/92-	Diesel		8695	200	272	07.92-	■	
FAS 75.270	01/92-, Auxiliary Axle	Diesel		8695	200	272	07.92-		■
FAS 75.270	01/92-, Auxiliary Axle	Diesel		8695	200	272	07.92-		■
FAV 75.270	01/92-	Diesel		8695	200	272	07.92-	■	
FAV 75.270	01/92-	Diesel		8695	200	272	07.92-	■	
FT 75.270	01/92-	Diesel		8695	200	272	07.92-	■	
FT 75.270	01/92-	Diesel		8695	200	272	07.92-	■	
FA 75.300	01/92-	Diesel		8695	222	302	07.92-	■	
FA 75.300	01/92-	Diesel		8695	222	302	07.92-	■	
FAG 75.300	01/92-, Auxiliary Axle	Diesel		8695	222	302	07.92-		■
FAG 75.300	01/92-, Auxiliary Axle	Diesel		8695	222	302	07.92-		■
FAN 75.300	01/92-, Auxiliary Axle	Diesel		8695	222	302	07.92-		■
FAN 75.300	01/92-, Auxiliary Axle	Diesel		8695	222	302	07.92-		■
FAR 75.300	01/92-	Diesel		8695	222	302	07.92-	■	
FAR 75.300	01/92-	Diesel		8695	222	302	07.92-	■	
FAR 75.300	01/92-, Auxiliary Axle	Diesel		8695	222	302	07.92-		■
FAR 75.300	01/92-, Auxiliary Axle	Diesel		8695	222	302	07.92-		■
FAS 75.300	01/92-	Diesel		8695	222	302	07.92-	■	
FAS 75.300	01/92-	Diesel		8695	222	302	07.92-	■	
FAS 75.300	01/92-, Auxiliary Axle	Diesel		8695	222	302	07.92-		■
FAS 75.300	01/92-, Auxiliary Axle	Diesel		8695	222	302	07.92-		■
FT 75.300	01/92-	Diesel		8695	222	302	07.92-	■	
FT 75.300	01/92-	Diesel		8695	222	302	07.92-	■	
85 07.92-02.98					Platform/Chassis				
FA 85.330	01/92-	Diesel		11595	242	329	07.92-	■	
FA 85.330	01/92-	Diesel		11595	242	329	07.92-	■	
FA 85.330	01/92-	Diesel		11595	242	329	07.92-	■	
FA 85.330	01/92-	Diesel		11595	242	329	07.92-	■	
FAG 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	07.92-		■
FAG 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	07.92-		■
FAR 85.330	01/92-	Diesel		11595	242	329	07.92-	■	
FAR 85.330	01/92-	Diesel		11595	242	329	07.92-	■	
FAR 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	07.92-		■
FAR 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	07.92-		■
FAS 85.330	01/92-	Diesel		11595	242	329	07.92-	■	
FAS 85.330	01/92-	Diesel		11595	242	329	07.92-	■	
FAS 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	07.92-		■
FAS 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	07.92-		■
FTG 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	07.92-		■
FTG 85.330	01/92-, Auxiliary Axle	Diesel		11595	242	329	07.92-		■
FA 85.360	01/92-	Diesel		11595	268	364	07.92-	■	
FA 85.360	01/92-	Diesel		11595	268	364	07.92-	■	
FA 85.360	01/92-	Diesel		11595	268	364	07.92-	■	
FA 85.360	01/92-	Diesel		11595	268	364	07.92-	■	
FAG 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	07.92-		■
FAG 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	07.92-		■
FAR 85.360	01/92-	Diesel		11595	268	364	07.92-	■	
FAR 85.360	01/92-	Diesel		11595	268	364	07.92-	■	
FAR 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	07.92-		■
FAR 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	07.92-		■
FAS 85.360	01/92-	Diesel		11595	268	364	07.92-	■	

LISTA DE APLICACIONES - BUYERS GUIDE

FAS 85.360	01/92-	Diesel		11595	268	364	07.92-	■	
FAS 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	07.92-		■
FAS 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	07.92-		■
FTG 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	07.92-		■
FTG 85.360	01/92-, Auxiliary Axle	Diesel		11595	268	364	07.92-		■
FA 85.400	01/95-	Diesel		11595	295	401	07.92-	■	
FA 85.400	01/95-	Diesel		11595	295	401	07.92-	■	
FA 85.400	01/95-	Diesel		11595	295	401	07.92-	■	
FA 85.400	01/95-	Diesel		11595	295	401	07.92-	■	
FAG 85.400	01/92-, Auxiliary Axle	Diesel		11595	295	401	07.92-		■
FAG 85.400	01/92-, Auxiliary Axle	Diesel		11595	295	401	07.92-		■
FAR 85.400	01/92-	Diesel		11595	295	401	07.92-	■	
FAR 85.400	01/92-	Diesel		11595	295	401	07.92-	■	
FAR 85.400	01/92-, Auxiliary Axle	Diesel		11595	295	401	07.92-		■
FAR 85.400	01/92-, Auxiliary Axle	Diesel		11595	295	401	07.92-		■
FAS 85.400	01/92-	Diesel		11595	295	401	07.92-	■	
FAS 85.400	01/92-	Diesel		11595	295	401	07.92-	■	
FAS 85.400	01/92-, Auxiliary Axle	Diesel		11595	295	401	07.92-		■
FAS 85.400	01/92-, Auxiliary Axle	Diesel		11595	295	401	07.92-		■
FTG 85.400	01/92-, Auxiliary Axle	Diesel		11595	295	401	07.92-		■
FTG 85.400	01/92-, Auxiliary Axle	Diesel		11595	295	401	07.92-		■
95 09.87-01.98					Platform/Chassis				
FA 95.330	01/90-	Diesel		11595	242	329	09.87-	■	
FA 95.330	01/90-	Diesel		11595	242	329	09.87-	■	
FAR 95.330	01/90-	Diesel		11595	242	329	09.87-	■	
FAR 95.330	01/90-	Diesel		11595	242	329	09.87-	■	
FAS 95.330	01/90-	Diesel		11595	242	329	09.87-	■	
FAS 95.330	01/90-	Diesel		11595	242	329	09.87-	■	
FTT 95.330	01/90-	Diesel		11595	242	329	09.87-	■	
FTT 95.330	01/90-	Diesel		11595	242	329	09.87-	■	
FA 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FA 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FAK 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FAK 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FTR 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FTR 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FTR 95.360	01/90-, Auxiliary Axle	Diesel		11595	268	364	09.87-		■
FTR 95.360	01/90-, Auxiliary Axle	Diesel		11595	268	364	09.87-		■
FTS 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FTS 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FTS 95.360	01/90-, Auxiliary Axle	Diesel		11595	268	364	09.87-		■
FTS 95.360	01/90-, Auxiliary Axle	Diesel		11595	268	364	09.87-		■
FTT 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FTT 95.360	01/90-	Diesel		11595	268	364	09.87-	■	
FA 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FA 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FAK 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FAK 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FTR 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FTR 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FTR 95.400	01/90-, Auxiliary Axle	Diesel		11595	295	401	09.87-		■

LISTA DE APLICACIONES - BUYERS GUIDE

FTR 95.400	01/90-, Auxiliary Axle	Diesel		11595	295	401	09.87-		■
FTS 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FTS 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FTS 95.400	01/90-, Auxiliary Axle	Diesel		11595	295	401	09.87-		■
FTS 95.400	01/90-, Auxiliary Axle	Diesel		11595	295	401	09.87-		■
FTT 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FTT 95.400	01/90-	Diesel		11595	295	401	09.87-	■	
FA 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
FA 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
FAK 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
FAK 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
FTR 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
FTR 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
FTR 95.430	01/90-, Auxiliary Axle	Diesel		11595	315	428	09.87-		■
FTR 95.430	01/90-, Auxiliary Axle	Diesel		11595	315	428	09.87-		■
FTS 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
FTS 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
FTS 95.430	01/90-, Auxiliary Axle	Diesel		11595	315	428	09.87-		■
FTS 95.430	01/90-, Auxiliary Axle	Diesel		11595	315	428	09.87-		■
FTT 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
FTT 95.430	01/90-	Diesel		11595	315	428	09.87-	■	
CF 65 01.01-05.13					Platform/Chassis				
FA 65.180	01/98-	Diesel		6195	133	181	01.01-	■	
FA 65.180	01/98-	Diesel		6195	133	181	01.01-	■	
FAV 65.180	01/98-	Diesel		6195	133	181	01.01-	■	
FAV 65.180	01/98-	Diesel		6195	133	181	01.01-	■	
FA 65.210	01/98-	Diesel		6195	156	212	01.01-	■	
FA 65.210	01/98-	Diesel		6195	156	212	01.01-	■	
FAV 65.210	01/98-	Diesel		6195	156	212	01.01-	■	
FAV 65.210	01/98-	Diesel		6195	156	212	01.01-	■	
FA 65.240	01/98-	Diesel		6195	177	241	01.01-	■	
FA 65.240	01/98-	Diesel		6195	177	241	01.01-	■	
CF 75 01.01-12.19					Platform/Chassis				
FA 75.250	01/98-	Diesel		9195	183	249	01.01-	■	
FA 75.250	01/98-	Diesel		9195	183	249	01.01-	■	
FAG 75.250	01/98-	Diesel		9195	183	249	01.01-		■
FAG 75.250	01/98-	Diesel		9195	183	249	01.01-		■
FAN 75.250	01/98-	Diesel		9195	183	249	01.01-		■
FAN 75.250	01/98-	Diesel		9195	183	249	01.01-		■
FAR 75.250	01/98-	Diesel		9195	183	249	01.01-	■	
FAR 75.250	01/98-	Diesel		9195	183	249	01.01-	■	
FAR 75.250	01/98-	Diesel		9195	183	249	01.01-		■
FAR 75.250	01/98-	Diesel		9195	183	249	01.01-		■
FAS 75.250	01/98-	Diesel		9195	183	249	01.01-	■	
FAS 75.250	01/98-	Diesel		9195	183	249	01.01-	■	
FAS 75.250	01/98-	Diesel		9195	183	249	01.01-		■
FAS 75.250	01/98-	Diesel		9195	183	249	01.01-		■
FT 75.250	01/98-	Diesel		9195	183	249	01.01-	■	
FT 75.250	01/98-	Diesel		9195	183	249	01.01-	■	
FA 75.290	01/98-	Diesel		9195	212	288	01.01-	■	
FA 75.290	01/98-	Diesel		9195	212	288	01.01-	■	

LISTA DE APLICACIONES - BUYERS GUIDE

FAG 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAG 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAG 75.320	01/98-	Diesel		9195	212	288	01.01-	■
FAG 75.320	01/98-	Diesel		9195	212	288	01.01-	■
FAN 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAN 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAN 75.320	01/98-	Diesel		9195	212	288	01.01-	■
FAN 75.320	01/98-	Diesel		9195	212	288	01.01-	■
FAR 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAR 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAR 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAR 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAS 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAS 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAS 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FAS 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FT 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FT 75.290	01/98-	Diesel		9195	212	288	01.01-	■
FA 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FA 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FAR 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FAR 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FAR 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FAR 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FAS 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FAS 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FAS 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FAS 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FT 75.320	01/98-	Diesel		9195	235	320	01.01-	■
FT 75.320	01/98-	Diesel		9195	235	320	01.01-	■
CF 85 01.01-05.13					Platform/Chassis			
FA 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FA 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FAC 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FAC 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FAC 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■
FAC 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■
FAG 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■
FAG 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■
FAN 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FAN 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FAN 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■
FAN 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■
FAR 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FAR 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FAR 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■
FAR 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■
FAS 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FAS 85.340	01/98-	Diesel		12595	250	340	01.01-	■
FAS 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■
FAS 85.340	01/98-, Auxiliary Axle	Diesel		12595	250	340	01.01-	■

LISTA DE APLICACIONES - BUYERS GUIDE

[illegible]

LISTA DE APLICACIONES - BUYERS GUIDE

FAS 85.430	01/98-, Auxiliary Axle	Diesel		12595	315	428	01.01-		■
FT 85.430	01/98-	Diesel		12595	315	428	01.01-	■	
FT 85.430	01/98-	Diesel		12595	315	428	01.01-	■	
FTG 85.430	01/98-	Diesel		12595	315	428	01.01-	■	
FTG 85.430	01/98-	Diesel		12595	315	428	01.01-	■	
FTG 85.430	01/98-, Auxiliary Axle	Diesel		12595	315	428	01.01-		■
FTG 85.430	01/98-, Auxiliary Axle	Diesel		12595	315	428	01.01-		■
F 1900					Platform/Chassis				
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FAV1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FAV1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FAV1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FAV1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FAV1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FAV1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FAV1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FAV1900 NT	01/89-	Diesel		6195	133	181	01.53-	■	
FD1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FD1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FD1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FD1900 DNT	01/89-	Diesel		6195	133	181	01.53-	■	
FA1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 NS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 NS	01/89-	Diesel		6195	156	212	01.53-	■	
FA1900 NS	01/89-	Diesel		6195	156	212	01.53-	■	

LISTA DE APLICACIONES - BUYERS GUIDE

FA1900 NS	01/89-	Diesel		6195	156	212	01.53-	■
FT1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■
FT1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■
FT1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■
FT1900 DNS	01/89-	Diesel		6195	156	212	01.53-	■
SB 01.74-					Bus			
200	01/89-	Diesel					01.74-	■
200	01/89-	Diesel					01.74-	■
220	01/89-	Diesel					01.74-	■
220	01/89-	Diesel					01.74-	■
SBG 01.89-								
220	01/89-	Diesel					01.89-	■
220	01/89-	Diesel					01.89-	■
XF 95 01.02-12.06								
FA 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FA 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FAC 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FAC 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FAC 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FAC 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FAR 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FAR 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FAR 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FAR 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FAS 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FAS 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FAS 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FAS 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FT 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FT 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FTR 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FTR 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FTR 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FTR 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FTS 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FTS 95.380	01/97-	Diesel		12595	280	381	01.02-	■
FTS 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FTS 95.380	01/97-, Auxiliary Axle	Diesel		12595	280	381	01.02-	■
FA 95.430	01/97-	Diesel		12595	315	428	01.02-	■
FA 95.430	01/97-	Diesel		12595	315	428	01.02-	■
FAC 95.430	01/97-	Diesel		12595	315	428	01.02-	■
FAC 95.430	01/97-	Diesel		12595	315	428	01.02-	■
FAC 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-	■
FAC 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-	■
FAR 95.430	01/97-	Diesel		12595	315	428	01.02-	■
FAR 95.430	01/97-	Diesel		12595	315	428	01.02-	■
FAR 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-	■
FAR 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-	■
FAS 95.430	01/97-	Diesel		12595	315	428	01.02-	■
FAS 95.430	01/97-	Diesel		12595	315	428	01.02-	■

LISTA DE APLICACIONES - BUYERS GUIDE

FAS 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-		■
FAS 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-		■
FT 95.430	01/97-	Diesel		12595	315	428	01.02-	■	
FT 95.430	01/97-	Diesel		12595	315	428	01.02-	■	
FTR 95.430	01/97-	Diesel		12595	315	428	01.02-	■	
FTR 95.430	01/97-	Diesel		12595	315	428	01.02-	■	
FTR 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-		■
FTR 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-		■
FTS 95.430	01/97-	Diesel		12595	315	428	01.02-	■	
FTS 95.430	01/97-	Diesel		12595	315	428	01.02-	■	
FTS 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-		■
FTS 95.430	01/97-, Auxiliary Axle	Diesel		12595	315	428	01.02-		■
FA 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FA 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FAC 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FAC 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FAC 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FAC 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FAR 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FAR 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FAR 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FAR 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FAS 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FAS 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FAS 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FAS 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FT 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FT 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FTR 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FTR 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FTR 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FTR 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FTS 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FTS 95.480	01/97-	Diesel		12595	355	483	01.02-	■	
FTS 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FTS 95.480	01/97-, Auxiliary Axle	Diesel		12595	355	483	01.02-		■
FA 95.530	01/97-	Diesel		12595	390	530	01.02-	■	
FA 95.530	01/97-	Diesel		12595	390	530	01.02-	■	
FAR 95.530	01/97-	Diesel		12595	390	530	01.02-	■	
FAR 95.530	01/97-	Diesel		12595	390	530	01.02-	■	
FAR 95.530	01/97-, Auxiliary Axle	Diesel		12595	390	530	01.02-		■
FAR 95.530	01/97-, Auxiliary Axle	Diesel		12595	390	530	01.02-		■
FAS 95.530	01/97-	Diesel		12595	390	530	01.02-	■	
FAS 95.530	01/97-	Diesel		12595	390	530	01.02-	■	
FAS 95.530	01/97-, Auxiliary Axle	Diesel		12595	390	530	01.02-		■
FAS 95.530	01/97-, Auxiliary Axle	Diesel		12595	390	530	01.02-		■
FT 95.530	01/97-	Diesel		13995	390	530	01.02-	■	
FT 95.530	01/97-	Diesel		13995	390	530	01.02-	■	