

1

# LISTA DE APLICACIONES - BUYERS GUIDE

1.8 i	-12/00	Gasolina	FWD	1761	66	90	01.98-04.03	■
1.8 i (LFZ (XU7JP))		Gasolina	FWD	1761	74	101	03.93-01.98	■
1.8 i (LFZ (XU7JP))		Gasolina	FWD	1761	74	101	03.93-01.98	■
1.8 i 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	06.95-12.01	■
1.8 i 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	06.95-12.01	■
1.8 i 16V		Gasolina	FWD	1761	81	110	01.98-04.03	■
1.8 i 16V		Gasolina	FWD	1761	81	110	01.98-04.03	■
1.9 D (DJZ (XUD9A))		Diesel	FWD	1905	50	68	06.94-01.98	■
1.9 D (DJZ (XUD9A))		Diesel	FWD	1905	50	68	06.94-01.98	■
1.9 D (D9B (XUD9A/L))		Diesel	FWD	1905	51	69	06.94-01.98	■
1.9 D (D9B (XUD9A/L))		Diesel	FWD	1905	51	69	06.94-01.98	■
1.9 SD (DHW (XUD9SD))		Diesel	FWD	1905	55	75	02.96-04.03	■
1.9 SD (DHW (XUD9SD))		Diesel	FWD	1905	55	75	02.96-04.03	■
1.9 SD	-12/00	Diesel	FWD	1905	55	75	01.98-04.03	■
1.9 SD	-12/00	Diesel	FWD	1905	55	75	01.98-04.03	■
1.9 Turbo D (DHX (XUD9TF/BTF))		Diesel	FWD	1905	66	90	05.93-04.03	■
1.9 Turbo D (DHX (XUD9TF/BTF))		Diesel	FWD	1905	66	90	05.93-04.03	■
1.9 Turbo D (DHY (XUD9TE/Y))		Diesel	FWD	1905	66	90	05.93-04.03	■
1.9 Turbo D (DHY (XUD9TE/Y))		Diesel	FWD	1905	66	90	05.93-04.03	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	03.99-04.03	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	03.99-04.03	■