


LISTA DE APLICACIONES - BUYERS GUIDE

31053-4680



8 424073 103505

Weight: 18.078

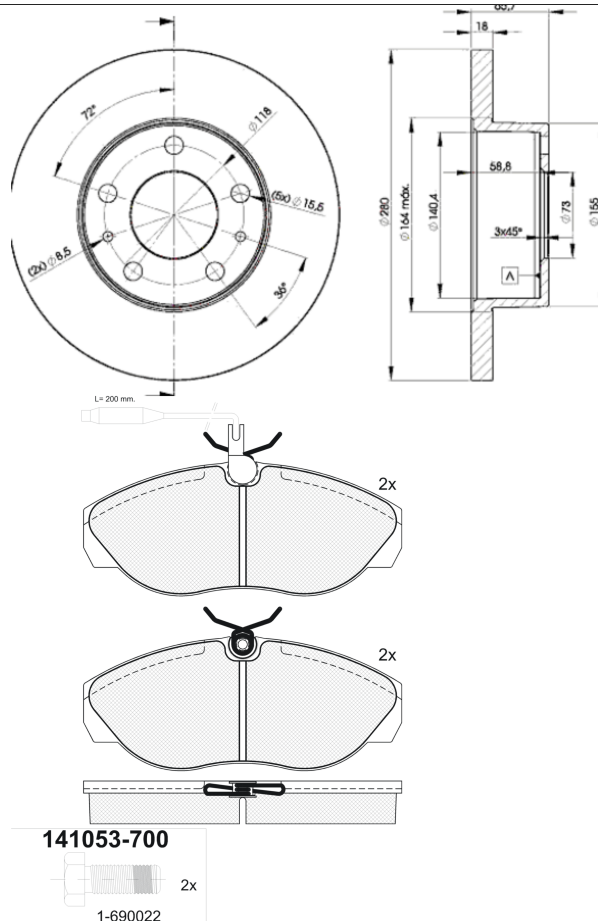

31053-4680



Lucas - Girling

145x60.95x19.7

Ø280x18x65.5

WVA

21797

MAKE

CITROËN

FIAT

PEUGEOT



Trac.	CC	Kw	CV
-------	----	----	----



Front / Rear

CITROËN

JUMPER II / RELAY (230P) 02.94-04.02

						Bus (Minibus-M2-Segment)			
2.0 (RFW (XU10J2U))	-12/01	Gasolina	FWD	1998	80	109	02.94-04.02	■	
2.0 (RFW (XU10J2U))	-12/01	Gasolina	FWD	1998	80	109	02.94-04.02	■	
2.0 4x4 (RFW (XU10J2U))	-12/01	Gasolina	4WD	1998	80	109	08.96-04.02	■	
2.0 4x4 (RFW (XU10J2U))	-12/01	Gasolina	4WD	1998	80	109	08.96-04.02	■	
1.9 D (D9B (XUD9A/U))	-12/01	Diesel	FWD	1905	51	69	01.99-04.02	■	
1.9 D (D9B (XUD9A/U))	-12/01	Diesel	FWD	1905	51	69	01.99-04.02	■	
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	66	90	08.94-04.02	■	
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	66	90	08.94-04.02	■	
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	08.94-04.02	■	
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	08.94-04.02	■	
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	08.96-04.02	■	
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	08.96-04.02	■	

JUMPER II / RELAY (230) 03.94-04.02

Platform/Chassis (LCVs-N1 Segment)

2.0 (RFW (XU10J2U))	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■	
2.0 (RFW (XU10J2U))	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■	
1.9 TD (DHX (XUD9TF/BTF))	-12/01	Diesel	FWD	1905	66	90	03.94-04.02	■	
1.9 TD (DHX (XUD9TF/BTF))	-12/01	Diesel	FWD	1905	66	90	03.94-04.02	■	
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	68	92	03.94-04.02	■	
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	68	92	03.94-04.02	■	
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	03.94-04.02	■	
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	03.94-04.02	■	
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	03.00-04.02	■	

LISTA DE APLICACIONES - BUYERS GUIDE

2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	03.00-04.02	■
JUMPER II / RELAY (230L) 02.94-08.02					Van (LCVs-N1 Segment)			
2.0 (RFW (XU10J2U))	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
2.0 (RFW (XU10J2U))	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
1.9 D (D9B (XUD9A/U))	01/99-	Diesel	FWD	1905	51	69	02.94-04.02	■
1.9 D (D9B (XUD9A/U))	01/99-	Diesel	FWD	1905	51	69	02.94-04.02	■
1.9 TD (DHX (XUD9TF/BTF))	-12/01	Diesel	FWD	1905	66	90	03.94-04.02	■
1.9 TD (DHX (XUD9TF/BTF))	-12/01	Diesel	FWD	1905	66	90	03.94-04.02	■
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	03.94-04.02	■
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	03.94-04.02	■
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	03.00-04.02	■
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	03.00-04.02	■
FIAT								
DUCATO II (230_) 03.94-05.05					Bus (Minibus-M2-Segment)			
2.0		Gasolina	FWD	1998	74	101	06.94-12.95	■
2.0		Gasolina	FWD	1998	74	101	06.94-12.95	■
2.0 Panorama/Combinato (RFW)	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
2.0 Panorama/Combinato (RFW)	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
1.9 D (DJY)	-12/01	Diesel	FWD	1905	50	68	04.98-04.02	■
1.9 D (DJY)	-12/01	Diesel	FWD	1905	50	68	04.98-04.02	■
1.9 D (DHX)		Diesel	FWD	1905	59	80	05.98-11.01	■
1.9 D (DHX)		Diesel	FWD	1905	59	80	05.98-11.01	■
1.9 TD (DHX)	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 TD (DHX)	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 TD (DHX (XUD9TF/L))	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 TD (DHX (XUD9TF/L))	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 D Combinato (230 A2.000)	-12/01	Diesel	FWD	1929	51	69	06.95-04.02	■
1.9 D Combinato (230 A2.000)	-12/01	Diesel	FWD	1929	51	69	06.95-04.02	■
1.9 TD Combinato (230 A4.000)	-12/01	Diesel	FWD	1929	59	80	08.94-04.02	■
1.9 TD Combinato (230 A4.000)	-12/01	Diesel	FWD	1929	59	80	08.94-04.02	■
1.9 TD Panorama/Combinato (230 A3.000)	-12/01	Diesel	FWD	1929	60	82	03.94-04.02	■
1.9 TD Panorama/Combinato (230 A3.000)	-12/01	Diesel	FWD	1929	60	82	03.94-04.02	■
2.0 JTD (RHV)	-12/01	Diesel	FWD	1997	62	84	10.01-04.02	■
2.0 JTD (RHV)	-12/01	Diesel	FWD	1997	62	84	10.01-04.02	■
2.5 TD		Diesel	FWD	2499	80	109	06.94-08.98	■
2.5 TD		Diesel	FWD	2499	80	109	06.94-08.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	80	109	11.94-04.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	80	109	11.94-04.98	■
2.5 TD 4x4 (8140.47)	-12/98	Diesel	4WD	2499	85	116	06.94-09.01	■
2.5 TD 4x4 (8140.47)	-12/98	Diesel	4WD	2499	85	116	06.94-09.01	■
2.5 TDI Panorama/Combinato (8140.47)	-12/01	Diesel	FWD	2499	85	116	03.94-04.02	■
2.5 TDI Panorama/Combinato (8140.47)	-12/01	Diesel	FWD	2499	85	116	03.94-04.02	■
2.5 D Combinato (8140.67)	-12/01	Diesel	FWD	2500	62	84	08.94-04.02	■
2.5 D Combinato (8140.67)	-12/01	Diesel	FWD	2500	62	84	08.94-04.02	■
2.5 TDI Panorama/Combinato (8140.47R)	-12/01	Diesel	FWD	2500	80	109	07.94-04.02	■
2.5 TDI Panorama/Combinato (8140.47R)	-12/01	Diesel	FWD	2500	80	109	07.94-04.02	■
2.5 TDI 4x4 (8140.47)	-12/01	Diesel	4WD	2500	85	116	04.97-04.02	■
2.5 TDI 4x4 (8140.47)	-12/01	Diesel	4WD	2500	85	116	04.97-04.02	■
2.8 JTD (8140.43S)	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
2.8 JTD (8140.43S)	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
2.8 JTD 4x4 (8140.43S)	-12/01	Diesel	4WD	2798	94	128	11.00-04.02	■

LISTA DE APLICACIONES - BUYERS GUIDE

2.8 JTD 4x4 (8140.43S)	-12/01	Diesel	4WD	2798	94	128	11.00-04.02	■
2.8 D (8140.63)	-12/01	Diesel	FWD	2800	64	87	02.98-04.02	■
2.8 D (8140.63)	-12/01	Diesel	FWD	2800	64	87	02.98-04.02	■
2.8 TDI (8140.43)	-12/01	Diesel	FWD	2800	90	122	10.97-04.02	■
2.8 TDI (8140.43)	-12/01	Diesel	FWD	2800	90	122	10.97-04.02	■
2.8 TDI 4x4 (8140.43)	-12/01	Diesel	4WD	2800	90	122	07.99-04.02	■
2.8 TDI 4x4 (8140.43)	-12/01	Diesel	4WD	2800	90	122	07.99-04.02	■
DUCATO II (230_) 03.94-04.02					Platform/Chassis (LCVs-N1 Segment)			
2.0 (RFW)	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
2.0 (RFW)	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
1.9 D (DJY)	-12/01	Diesel	FWD	1905	50	68	04.98-04.02	■
1.9 D (DJY)	-12/01	Diesel	FWD	1905	50	68	04.98-04.02	■
1.9 TD (DHX)		Diesel	FWD	1905	59	80	05.98-11.01	■
1.9 TD (DHX)		Diesel	FWD	1905	59	80	05.98-11.01	■
1.9 TD (DHX)	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 TD (DHX)	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 TD (DHX (XUD9TF/L))	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 TD (DHX (XUD9TF/L))	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 D (230 A2.000)	01/95-	Diesel	FWD	1929	51	69	03.94-04.02	■
1.9 D (230 A2.000)	01/95-	Diesel	FWD	1929	51	69	03.94-04.02	■
1.9 TD CAT (230 A4.000)	-12/01	Diesel	FWD	1929	59	80	08.94-04.02	■
1.9 TD CAT (230 A4.000)	-12/01	Diesel	FWD	1929	59	80	08.94-04.02	■
1.9 TD (230 A3.000)	-12/01	Diesel	FWD	1929	60	82	03.94-04.02	■
1.9 TD (230 A3.000)	-12/01	Diesel	FWD	1929	60	82	03.94-04.02	■
2.5 TD (8140.47)		Diesel	FWD	2499	80	109	06.94-08.98	■
2.5 TD (8140.47)		Diesel	FWD	2499	80	109	06.94-08.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	80	109	11.94-04.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	80	109	11.94-04.98	■
2.5 TD (8140.47)		Diesel	FWD	2499	85	116	06.94-04.98	■
2.5 TD (8140.47)		Diesel	FWD	2499	85	116	06.94-04.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	85	116	11.94-04.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	85	116	11.94-04.98	■
2.5 D (8140.67)	-12/01	Diesel	FWD	2500	62	84	03.94-04.02	■
2.5 D (8140.67)	-12/01	Diesel	FWD	2500	62	84	03.94-04.02	■
2.5 D 4x4 (8140.67)	-12/01	Diesel	4WD	2500	62	84	03.94-04.02	■
2.5 D 4x4 (8140.67)	-12/01	Diesel	4WD	2500	62	84	03.94-04.02	■
2.5 TDI (8140.47R)	-12/01	Diesel	FWD	2500	80	109	03.94-04.02	■
2.5 TDI (8140.47R)	-12/01	Diesel	FWD	2500	80	109	03.94-04.02	■
2.5 TDI	-12/01	Diesel	FWD	2500	85	116	03.94-04.02	■
2.5 TDI	-12/01	Diesel	FWD	2500	85	116	03.94-04.02	■
2.5 TDI 4x4 (8140.47)	-12/01	Diesel	4WD	2500	85	116	06.98-04.02	■
2.5 TDI 4x4 (8140.47)	-12/01	Diesel	4WD	2500	85	116	06.98-04.02	■
2.8 JTD (8140.43S)	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
2.8 JTD (8140.43S)	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
2.8 TD 4x4 (8140.63)		Diesel	4WD	2799	64	87	05.98-11.01	■
2.8 TD 4x4 (8140.63)		Diesel	4WD	2799	64	87	05.98-11.01	■
2.8 iDTD 4x4 (8140.43)		Diesel	4WD	2799	90	122	05.98-09.01	■
2.8 iDTD 4x4 (8140.43)		Diesel	4WD	2799	90	122	05.98-09.01	■
2.8 D (8140.63)	-12/01	Diesel	FWD	2800	64	87	02.98-04.02	■
2.8 D (8140.63)	-12/01	Diesel	FWD	2800	64	87	02.98-04.02	■
2.8 TDI (8140.43)	-12/01	Diesel	FWD	2800	90	122	12.98-04.02	■

LISTA DE APLICACIONES - BUYERS GUIDE

2.8 TDI (8140.43)	-12/01	Diesel	FWD	2800	90	122	12.98-04.02	■
DUCATO II (230_) 03.94-05.05					Van (LCVs-N1 Segment)			
2.0		Gasolina	FWD	1998	74	101	06.94-12.95	■
2.0		Gasolina	FWD	1998	74	101	06.94-12.95	■
2.0 (RFW)	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
2.0 (RFW)	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
2.0 4x4 (RFW)	-12/01	Gasolina	4WD	1998	80	109	11.94-04.02	■
2.0 4x4 (RFW)	-12/01	Gasolina	4WD	1998	80	109	11.94-04.02	■
1.9 D (DJY)	-12/01	Diesel	FWD	1905	50	68	04.98-04.02	■
1.9 D (DJY)	-12/01	Diesel	FWD	1905	50	68	04.98-04.02	■
1.9 TD (DHX)		Diesel	FWD	1905	59	80	05.98-11.01	■
1.9 TD (DHX)		Diesel	FWD	1905	59	80	05.98-11.01	■
1.9 TD (DHX)	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 TD (DHX)	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 TD (DHX (XUD9TF/L))	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 TD (DHX (XUD9TF/L))	-12/01	Diesel	FWD	1905	66	90	04.98-04.02	■
1.9 D (230 A2.000)	01/95-	Diesel	FWD	1929	51	69	03.94-04.02	■
1.9 D (230 A2.000)	01/95-	Diesel	FWD	1929	51	69	03.94-04.02	■
1.9 TD CAT (230 A4.000)	-12/01	Diesel	FWD	1929	59	80	08.94-04.02	■
1.9 TD CAT (230 A4.000)	-12/01	Diesel	FWD	1929	59	80	08.94-04.02	■
1.9 TD (230 A3.000)	-12/01	Diesel	FWD	1929	60	82	03.94-04.02	■
1.9 TD (230 A3.000)	-12/01	Diesel	FWD	1929	60	82	03.94-04.02	■
2.0 JTD (RHV)	-12/01	Diesel	FWD	1997	62	84	10.01-04.02	■
2.0 JTD (RHV)	-12/01	Diesel	FWD	1997	62	84	10.01-04.02	■
2.5 TD (8140.47)		Diesel	FWD	2499	80	109	06.94-08.98	■
2.5 TD (8140.47)		Diesel	FWD	2499	80	109	06.94-08.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	80	109	11.94-04.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	80	109	11.94-04.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	85	116	11.94-04.98	■
2.5 TD 4x4 (8140.47)		Diesel	4WD	2499	85	116	11.94-04.98	■
2.5 D (8140.67)	-12/01	Diesel	FWD	2500	62	84	03.94-04.02	■
2.5 D (8140.67)	-12/01	Diesel	FWD	2500	62	84	03.94-04.02	■
2.5 TDI (8140.47R)	-12/01	Diesel	FWD	2500	80	109	03.94-04.02	■
2.5 TDI (8140.47R)	-12/01	Diesel	FWD	2500	80	109	03.94-04.02	■
2.5 TDI (8140.47)	-12/01	Diesel	FWD	2500	85	116	03.94-04.02	■
2.5 TDI (8140.47)	-12/01	Diesel	FWD	2500	85	116	03.94-04.02	■
2.5 TDI 4x4 (8140.47)	-12/01	Diesel	4WD	2500	85	116	05.98-04.02	■
2.5 TDI 4x4 (8140.47)	-12/01	Diesel	4WD	2500	85	116	05.98-04.02	■
2.8 JTD (8140.43S)	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
2.8 JTD (8140.43S)	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
2.8 JTD 4x4 (8140.43S)	-12/01	Diesel	4WD	2798	94	128	11.00-04.02	■
2.8 JTD 4x4 (8140.43S)	-12/01	Diesel	4WD	2798	94	128	11.00-04.02	■
2.8 TD 4x4 (8140.43)		Diesel	4WD	2799	90	122	05.98-09.01	■
2.8 TD 4x4 (8140.43)		Diesel	4WD	2799	90	122	05.98-09.01	■
2.8 D (8140.63)	-12/01	Diesel	FWD	2800	64	87	05.98-04.02	■
2.8 D (8140.63)	-12/01	Diesel	FWD	2800	64	87	05.98-04.02	■
2.8 D 4x4 (8140.63)	-12/01	Diesel	4WD	2800	64	87	08.98-04.02	■
2.8 D 4x4 (8140.63)	-12/01	Diesel	4WD	2800	64	87	08.98-04.02	■
2.8 TDI (8140.43)	-12/01	Diesel	FWD	2800	90	122	10.97-04.02	■
2.8 TDI (8140.43)	-12/01	Diesel	FWD	2800	90	122	10.97-04.02	■
2.8 TDI 4x4 (8140.43)	-12/01	Diesel	4WD	2800	90	122	06.99-04.02	■

LISTA DE APLICACIONES - BUYERS GUIDE

2.8 TDI 4x4 (8140.43)	-12/01	Diesel	4WD	2800	90	122	06.99-04.02	■
PEUGEOT								
BOXER II (230P) 03.94-12.09					Bus (Minibus-M2-Segment)			
2.0 i (RFW (XU10J2))	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
2.0 i (RFW (XU10J2))	-12/01	Gasolina	FWD	1998	80	109	03.94-04.02	■
2.0 i 4x4 (RFW (XU10J2))	-12/01	Gasolina	4WD	1998	80	109	08.96-04.02	■
2.0 i 4x4 (RFW (XU10J2))	-12/01	Gasolina	4WD	1998	80	109	08.96-04.02	■
1.9 D (D9B (XUD9AU))	-12/01	Diesel	FWD	1905	51	69	03.94-04.02	■
1.9 D (D9B (XUD9AU))	-12/01	Diesel	FWD	1905	51	69	03.94-04.02	■
1.9 TD (DHY (XUD9TE))	-12/01	Diesel	FWD	1905	66	90	08.94-04.02	■
1.9 TD (DHY (XUD9TE))	-12/01	Diesel	FWD	1905	66	90	08.94-04.02	■
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	68	92	03.94-04.02	■
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	68	92	03.94-04.02	■
1.9 TD 4x4 (D8C (XUD9UTF))	-12/01	Diesel	4WD	1905	68	92	07.96-04.02	■
1.9 TD 4x4 (D8C (XUD9UTF))	-12/01	Diesel	4WD	1905	68	92	07.96-04.02	■
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	08.94-04.02	■
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	08.94-04.02	■
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	07.96-04.02	■
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	07.96-04.02	■
2.5 TD (T8A (DJ5T))		Diesel	FWD	2446	76	103	07.94-12.97	■
2.5 TD (T8A (DJ5T))		Diesel	FWD	2446	76	103	07.94-12.97	■
2.5 TD 4x4 (T8A (DJ5T))	-12/01	Diesel	4WD	2446	76	103	07.96-04.02	■
2.5 TD 4x4 (T8A (DJ5T))	-12/01	Diesel	4WD	2446	76	103	07.96-04.02	■
2.5 TDI (THX (DJ5TED))	-12/01	Diesel	FWD	2446	79	107	01.97-04.02	■
2.5 TDI (THX (DJ5TED))	-12/01	Diesel	FWD	2446	79	107	01.97-04.02	■
2.5 TDI 4x4 (THX (DJ5TED))	-12/01	Diesel	4WD	2446	79	107	01.97-04.02	■
2.5 TDI 4x4 (THX (DJ5TED))	-12/01	Diesel	4WD	2446	79	107	01.97-04.02	■
2.5 DT		Diesel	FWD	2499	62	84	10.97-11.01	■
2.5 DT		Diesel	FWD	2499	62	84	10.97-11.01	■
2.8 DTiC		Diesel	FWD	2798	90	122	10.97-09.00	■
2.8 DTiC		Diesel	FWD	2798	90	122	10.97-09.00	■
2.8 HDi A las 4 ruedas (8140.43S (F28DTCR))		Diesel	4WD	2798	93	126	10.00-11.01	■
2.8 HDi A las 4 ruedas (8140.43S (F28DTCR))		Diesel	4WD	2798	93	126	10.00-11.01	■
2.8 HDI (8140.43S (F28DTCR))	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
2.8 HDI (8140.43S (F28DTCR))	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
BOXER II (ZCT_) 03.94-04.02					Platform/Chassis (LCVs-N1 Segment)			
2.0 i (RFW (XU10J2))	-12/01	Gasolina	FWD	1998	80	109	06.94-04.02	■
2.0 i (RFW (XU10J2))	-12/01	Gasolina	FWD	1998	80	109	06.94-04.02	■
1.9 D (DJY (XUD9A))	01/99-	Diesel	FWD	1905	51	69	03.94-04.02	■
1.9 D (DJY (XUD9A))	01/99-	Diesel	FWD	1905	51	69	03.94-04.02	■
1.9 TD (DHY (XUD9TE))	01/99-	Diesel	FWD	1905	66	90	06.94-04.02	■
1.9 TD (DHY (XUD9TE))	01/99-	Diesel	FWD	1905	66	90	06.94-04.02	■
1.9 TD (XUD9TE)	01/99-	Diesel	FWD	1905	66	90	06.94-04.02	■
1.9 TD (XUD9TE)	01/99-	Diesel	FWD	1905	66	90	06.94-04.02	■
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	68	92	07.94-04.02	■
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	68	92	07.94-04.02	■
1.9 TD (XUD9TE)	-12/01	Diesel	FWD	1905	68	92	07.94-04.02	■
1.9 TD (XUD9TE)	-12/01	Diesel	FWD	1905	68	92	07.94-04.02	■
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	03.94-04.02	■
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	03.94-04.02	■

LISTA DE APLICACIONES - BUYERS GUIDE

2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	07.99-04.02	■
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	07.99-04.02	■
2.5 TD (T8A (DJ5T))		Diesel	FWD	2446	76	103	03.94-12.97	■
2.5 TD (T8A (DJ5T))		Diesel	FWD	2446	76	103	03.94-12.97	■
2.5 TDI (THX (DJ5TED))	-12/01	Diesel	FWD	2446	79	107	01.97-04.02	■
2.5 TDI (THX (DJ5TED))	-12/01	Diesel	FWD	2446	79	107	01.97-04.02	■
2.5 TDI 4x4 (THX (DJ5TED))	-12/01	Diesel	4WD	2446	79	107	07.99-04.02	■
2.5 TDI 4x4 (THX (DJ5TED))	-12/01	Diesel	4WD	2446	79	107	07.99-04.02	■
2.8 HDi A las 4 ruedas (8140.43S (F28DTCR))		Diesel	4WD	2798	93	126	10.00-11.01	■
2.8 HDi A las 4 ruedas (8140.43S (F28DTCR))		Diesel	4WD	2798	93	126	10.00-11.01	■
2.8 HDi (8140.43S (F28DTCR))	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
2.8 HDi (8140.43S (F28DTCR))	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
BOXER II (230L) 03.94-08.06					Van (LCVs-N1 Segment)			
2.0 4x4 (RFW (XU10J2))		Gasolina	4WD	1998	80	109	03.96-09.98	■
2.0 4x4 (RFW (XU10J2))		Gasolina	4WD	1998	80	109	03.96-09.98	■
2.0 i (RFW (XU10J2))	-12/01	Gasolina	FWD	1998	80	109	06.94-04.02	■
2.0 i (RFW (XU10J2))	-12/01	Gasolina	FWD	1998	80	109	06.94-04.02	■
1.9 D (DJY (XUD9A))	-12/01	Diesel	FWD	1905	50	68	07.99-04.02	■
1.9 D (DJY (XUD9A))	-12/01	Diesel	FWD	1905	50	68	07.99-04.02	■
1.9 D (D9B (XUD9AU))	-12/01	Diesel	FWD	1905	51	69	03.94-04.02	■
1.9 D (D9B (XUD9AU))	-12/01	Diesel	FWD	1905	51	69	03.94-04.02	■
1.9 DT 4x4 (XUD9TE)		Diesel	4WD	1905	66	90	03.96-09.98	■
1.9 DT 4x4 (XUD9TE)		Diesel	4WD	1905	66	90	03.96-09.98	■
1.9 TD (XUD9TE)	-12/01	Diesel	FWD	1905	66	90	07.99-04.02	■
1.9 TD (XUD9TE)	-12/01	Diesel	FWD	1905	66	90	07.99-04.02	■
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	68	92	03.94-04.02	■
1.9 TD (D8C (XUD9UTF))	-12/01	Diesel	FWD	1905	68	92	03.94-04.02	■
2.0 HDi (RHV (DW10UTD))	-12/01	Diesel	FWD	1997	62	84	08.01-04.02	■
2.0 HDi (RHV (DW10UTD))	-12/01	Diesel	FWD	1997	62	84	08.01-04.02	■
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	03.94-04.02	■
2.5 D (T9A (DJ5))	-12/01	Diesel	FWD	2446	63	86	03.94-04.02	■
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	07.99-04.02	■
2.5 D 4x4 (T9A (DJ5))	-12/01	Diesel	4WD	2446	63	86	07.99-04.02	■
2.5 TD (T8A (DJ5T))		Diesel	FWD	2446	76	103	03.94-03.02	■
2.5 TD (T8A (DJ5T))		Diesel	FWD	2446	76	103	03.94-03.02	■
2.5 TDI (THX (DJ5TED))	-12/01	Diesel	FWD	2446	79	107	01.97-04.02	■
2.5 TDI (THX (DJ5TED))	-12/01	Diesel	FWD	2446	79	107	01.97-04.02	■
2.5 TDI 4x4 (THX (DJ5TED))	-12/01	Diesel	4WD	2446	79	107	07.99-04.02	■
2.5 TDI 4x4 (THX (DJ5TED))	-12/01	Diesel	4WD	2446	79	107	07.99-04.02	■
2.5 DT		Diesel	FWD	2499	62	84	10.97-11.01	■
2.5 DT		Diesel	FWD	2499	62	84	10.97-11.01	■
2.8 DTiC		Diesel	FWD	2798	90	122	10.97-08.05	■
2.8 DTiC		Diesel	FWD	2798	90	122	10.97-08.05	■
2.8 HDi 4x4 (8140.43S (F28DTCR))		Diesel	4WD	2798	93	126	10.00-11.01	■
2.8 HDi 4x4 (8140.43S (F28DTCR))		Diesel	4WD	2798	93	126	10.00-11.01	■
2.8 HDi (8140.43S (F28DTCR))	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■
2.8 HDi (8140.43S (F28DTCR))	-12/01	Diesel	FWD	2798	94	128	11.00-04.02	■