

1

LISTA DE APLICACIONES - BUYERS GUIDE

1.8 D (A9A (XUD7))		Diesel	FWD	1769	43	58	10.97-09.00	■
1.8 D (A9A (XUD7))		Diesel	FWD	1769	43	58	10.97-09.00	■
1.9 D (WJY (DW8B))	-12/00	Diesel	FWD	1868	51	70	07.98-08.05	■
1.9 D (WJY (DW8B))	-12/00	Diesel	FWD	1868	51	70	07.98-08.05	■
1.9 D (WJZ (DW8))	-12/00	Diesel	FWD	1868	51	70	07.98-08.05	■
1.9 D (WJZ (DW8))	-12/00	Diesel	FWD	1868	51	70	07.98-08.05	■
XSARA (N1) 04.97-12.05					Hatchback (Compact car-C Segment)			
1.8 i 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	04.97-09.00	■
1.8 i 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	04.97-09.00	■
2.0 16V (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	07.98-09.00	■
2.0 16V (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	07.98-09.00	■
2.0 HDI 90 (RHY (DW10TD))	-12/00	Diesel	FWD	1997	66	90	02.99-03.05	■
2.0 HDI 90 (RHY (DW10TD))	-12/00	Diesel	FWD	1997	66	90	02.99-03.05	■
PEUGEOT								
206 (2D) 09.00-					Convertible (Supermini car-B Segment)			
1.6 16V (2DNFUF, 2DNFUR) (NFU (TU5JP4))	-12/06	Gasolina	FWD	1587	80	109	09.00-12.07	■
1.6 16V (2DNFUF, 2DNFUR) (NFU (TU5JP4))	-12/06	Gasolina	FWD	1587	80	109	09.00-12.07	■
206 (2A/C) 08.98-					Hatchback (Supermini car-B Segment)			
1.6 16V (NFU (TU5JP4))	-12/01	Gasolina	FWD	1587	80	109	07.00-04.09	■
1.6 16V (NFU (TU5JP4))	-12/01	Gasolina	FWD	1587	80	109	07.00-04.09	■
2.0 S16 (RFR (EW10J4))	-12/99	Gasolina	FWD	1997	99	135	04.99-10.00	■
2.0 S16 (RFR (EW10J4))	-12/99	Gasolina	FWD	1997	99	135	04.99-10.00	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	12.99-09.09	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	12.99-09.09	■
306 (7D, N3, N5) 01.94-04.02					Convertible (Compact car-C Segment)			
1.8 (L6A (XU7JP))	01/97-	Gasolina	FWD	1761	74	101	03.94-04.02	■
1.8 (L6A (XU7JP))	01/97-	Gasolina	FWD	1761	74	101	03.94-04.02	■
1.8 (LFZ (XU7JP))	01/97-	Gasolina	FWD	1761	74	101	03.94-04.02	■
1.8 (LFZ (XU7JP))	01/97-	Gasolina	FWD	1761	74	101	03.94-04.02	■
1.8 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	05.97-04.02	■
1.8 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	05.97-04.02	■
2.0 16V (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	03.97-04.02	■
2.0 16V (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	03.97-04.02	■
306 (7E, N3, N5) 06.94-12.02					Estate (Compact car-C Segment)			
1.8 (LFZ (XU7JP))	-12/99	Gasolina	FWD	1761	74	101	03.97-04.02	■
1.8 (LFZ (XU7JP))	-12/99	Gasolina	FWD	1761	74	101	03.97-04.02	■
1.8 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	03.97-04.02	■
1.8 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	03.97-04.02	■
2.0 (RFV (XU10J4R))	-12/01	Gasolina	FWD	1998	97	132	03.97-04.02	■
2.0 (RFV (XU10J4R))	-12/01	Gasolina	FWD	1998	97	132	03.97-04.02	■
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	09.98-04.02	■
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	09.98-04.02	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	09.98-04.02	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	09.98-04.02	■
1.9 D (DJY (XUD9A))		Diesel	FWD	1905	50	68	03.97-04.02	■
1.9 D (DJY (XUD9A))		Diesel	FWD	1905	50	68	03.97-04.02	■
1.9 D (DJY (XUD9A))		Diesel	FWD	1905	51	69	05.97-05.99	■
1.9 D (DJY (XUD9A))		Diesel	FWD	1905	51	69	05.97-05.99	■
1.9 D (DHV (XUD9BSD))		Diesel	FWD	1905	55	75	03.98-04.02	■

LISTA DE APLICACIONES - BUYERS GUIDE

1.9 D (DHV (XUD9BSD))		Diesel	FWD	1905	55	75	03.98-04.02	■
1.9 TD (D8A (XUD9TE))		Diesel	FWD	1905	66	90	02.97-04.02	■
1.9 TD (D8A (XUD9TE))		Diesel	FWD	1905	66	90	02.97-04.02	■
1.9 TD (DHY (XUD9TE))		Diesel	FWD	1905	66	90	02.97-04.02	■
1.9 TD (DHY (XUD9TE))		Diesel	FWD	1905	66	90	02.97-04.02	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	06.99-04.02	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	06.99-04.02	■
306 (7A, 7C, N3, N5) 01.93-10.03					Hatchback (Compact car-C Segment)			
1.8 (LFZ (XU7JP))	01/97-	Gasolina	FWD	1761	74	101	05.93-05.01	■
1.8 (LFZ (XU7JP))	01/97-	Gasolina	FWD	1761	74	101	05.93-05.01	■
1.8 (LFZ (XU7JP))		Gasolina	FWD	1761	74	101	05.93-05.01	■
1.8 (LFZ (XU7JP))		Gasolina	FWD	1761	74	101	05.93-05.01	■
1.8 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	03.97-05.01	■
1.8 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	03.97-05.01	■
1.8 16V		Gasolina	FWD	1761	86	117	10.99-10.03	■
1.8 16V		Gasolina	FWD	1761	86	117	10.99-10.03	■
2.0 16V (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	03.97-05.01	■
2.0 16V (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	03.97-05.01	■
2.0 16V (RFV (XU10J4R))		Gasolina	FWD	1998	99	135	03.97-06.00	■
2.0 16V (RFV (XU10J4R))		Gasolina	FWD	1998	99	135	03.97-06.00	■
2.0		Gasolina	FWD	1998	123	167	01.98-05.00	■
2.0		Gasolina	FWD	1998	123	167	01.98-05.00	■
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	09.98-05.01	■
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	09.98-05.01	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	09.98-05.01	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	09.98-05.01	■
1.9 D (DJY (XUD9A))	01/97-	Diesel	FWD	1905	50	68	06.94-05.01	■
1.9 D (DJY (XUD9A))	01/97-	Diesel	FWD	1905	50	68	06.94-05.01	■
1.9 D (DHV (XUD9BSD))		Diesel	FWD	1905	55	75	03.98-05.01	■
1.9 D (DHV (XUD9BSD))		Diesel	FWD	1905	55	75	03.98-05.01	■
1.9 DT (DHY (XUD9TE))	01/97-	Diesel	FWD	1905	66	90	05.93-05.01	■
1.9 DT (DHY (XUD9TE))	01/97-	Diesel	FWD	1905	66	90	05.93-05.01	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	06.99-12.02	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	06.99-12.02	■
306 (7B, N3, N5) 04.93-10.03					Saloon (Compact car-C Segment)			
1.6 (NFZ (TU5JP))		Gasolina	FWD	1587	66	90	07.00-05.01	■
1.6 (NFZ (TU5JP))		Gasolina	FWD	1587	66	90	07.00-05.01	■
1.8 ST (LFZ (XU7JP))	01/97-	Gasolina	FWD	1761	74	101	06.94-05.01	■
1.8 ST (LFZ (XU7JP))	01/97-	Gasolina	FWD	1761	74	101	06.94-05.01	■
1.8 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	03.97-05.01	■
1.8 16V (LFY (XU7JP4))		Gasolina	FWD	1761	81	110	03.97-05.01	■
2.0 (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	03.97-05.01	■
2.0 (RFV (XU10J4R))		Gasolina	FWD	1998	97	132	03.97-05.01	■
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	09.98-05.01	■
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	09.98-05.01	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	09.98-05.01	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	09.98-05.01	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	06.99-12.01	■
2.0 HDI 90 (RHY (DW10TD))		Diesel	FWD	1997	66	90	06.99-12.01	■