

LISTA DE APLICACIONES - BUYERS GUIDE

1.9 D 70 (WJY (DW8B))		Diesel	FWD	1868	51	69	04.98-10.06	■
1.9 D 70 (WJZ (DW8))		Diesel	FWD	1868	51	69	04.98-10.06	■
1.9 D (D9B (XUD9A/U))		Diesel	FWD	1905	51	69	10.95-08.98	■
1.9 DT		Diesel	FWD	1905	65	88	10.95-08.00	■
1.9 TD (DHX (XUD9TF/BTF))		Diesel	FWD	1905	66	90	10.95-08.00	■
2.0 HDi 95 (RHX (DW10BTED))		Diesel	FWD	1997	69	94	10.99-10.06	■
2.0 HDi 110 (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	10.01-10.06	■
2.0 HDi 110 (RHZ (DW10BTED))		Diesel	FWD	1997	80	109	10.01-10.06	■
2.0 HDi 110 (RHZ (DW10BTED+))		Diesel	FWD	1997	80	109	10.01-10.06	■
2.0 HDi 110 (RHZ (DW10CTED))		Diesel	FWD	1997	80	109	10.01-10.06	■
2.0 HDi 110 (RHZ (DW10CTED+))		Diesel	FWD	1997	80	109	10.01-10.06	■
2.2 HDi		Diesel	RWD	2179	66	90	12.03-10.06	■
FIAT								
SCUDO (220_) 02.96-12.06					Bus (Minibus-M2-Segment)			
1.6 (220 A 2.000)		Gasolina	FWD	1581	58	79	02.96-12.06	■
2.0 16V (RFN (EW10J4))		Gasolina	FWD	1997	100	136	06.00-12.06	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	04.98-12.06	■
1.9 D (D9B)		Diesel	FWD	1905	51	69	02.96-04.98	■
1.9 TD Eco (DHX (XUD9TF/L))		Diesel	FWD	1905	66	90	02.96-12.06	■
1.9 TD (D8B)		Diesel	FWD	1905	68	92	02.96-12.06	■
2.0 JTD (RHX)		Diesel	FWD	1997	69	94	01.04-12.06	■
2.0 JTD (RHZ)		Diesel	FWD	1997	80	109	12.99-12.06	■
2.0 JTD 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	05.99-12.06	■
SCUDO (220_) 09.96-12.06					Platform/Chassis (LCVs-N1 Segment)			
1.6 (220 A 2.000)		Gasolina	FWD	1581	58	79	09.96-12.06	■
1.9 D (WJY (DW8))		Diesel	FWD	1868	51	69	04.98-12.06	■
1.9 TD (D8B)		Diesel	FWD	1905	68	92	09.96-12.06	■
1.9 TD (DHX (XUD9TF/L))		Diesel	FWD	1905	68	92	09.96-12.06	■
2.0 JTD (RHX)		Diesel	FWD	1997	69	94	10.99-12.06	■
2.0 JTD (RHZ)		Diesel	FWD	1997	80	109	12.02-12.06	■
2.0 JTD 16V (RHK (DW10UTED4))		Diesel	FWD	1997	80	109	05.99-12.06	■
2.0 JTD 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	05.99-12.06	■
SCUDO (220_) 02.96-12.06					Van (LCVs-N1 Segment)			
1.6 (220 A 2.000)		Gasolina	FWD	1581	58	79	02.96-12.06	■
2.0 (RFN (EW10J4))		Gasolina	FWD	1997	100	136	05.00-12.06	■
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	04.98-12.06	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	04.98-12.06	■
1.9 D (D9B)		Diesel	FWD	1905	51	69	02.96-12.06	■
1.9 TD (DHX (XUD9TF/L))		Diesel	FWD	1905	66	90	02.96-12.06	■
1.9 TD (D8B)		Diesel	FWD	1905	68	92	02.98-12.06	■
2.0 JTD (RHX)		Diesel	FWD	1997	69	94	10.99-12.06	■
2.0 JTD (RHZ)		Diesel	FWD	1997	80	109	12.02-12.06	■
2.0 JTD 16V (RHK (DW10UTED4))		Diesel	FWD	1997	80	109	05.99-12.06	■
2.0 JTD 16V (RHM (DW10ATED4))		Diesel	FWD	1997	80	109	05.99-12.06	■
2.0 JTD 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	05.99-12.06	■
ULYSSE (220_) 06.94-08.02					MPV (Large MPV-M1 Segment)			
1.8 (220.BB5) (LFW (XU7JP))		Gasolina	FWD	1761	73	99	05.97-08.02	■
PEUGEOT								

LISTA DE APLICACIONES - BUYERS GUIDE

806 (221) 06.94-08.02					MPV (Large MPV-M1 Segment)			
1.8 (LFW (XU7JP))		Gasolina	FWD	1761	73	99	07.95-08.02	■
EXPERT (224_) 10.95-12.06					Bus (Minibus-M2-Segment)			
1.6 (222A2 (1580 SPI))		Gasolina	FWD	1581	58	79	02.96-09.00	■
1.8 (LFZ (XU7JP))		Gasolina	FWD	1761	74	101	10.96-09.00	■
2.0 (RFN (EW10J4))		Gasolina	FWD	1997	100	136	07.00-12.06	■
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	12.03-12.06	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	12.03-12.06	■
1.9 D (D9B (XUD9AU))		Diesel	FWD	1905	51	70	02.96-12.98	■
1.9 TD (DHX (XUD9TE))		Diesel	FWD	1905	66	90	02.96-09.00	■
1.9 TD (D8B (XUD9TE))		Diesel	FWD	1905	68	92	02.96-05.98	■
1.9 D		Diesel	RWD	1905	69	94	10.95-05.98	■
2.0 HDi (RHX (DW10BTED))		Diesel	FWD	1997	69	94	10.00-10.06	■
2.0 HDi (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED+))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10CTED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi 16V (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	07.00-12.06	■
EXPERT (223) 12.95-12.06					Platform/Chassis (LCVs-N1 Segment)			
1.6 (222A2 (1580 SPI))		Gasolina	FWD	1581	58	79	02.96-09.00	■
1.9 D (WJY (DW8B))		Diesel	FWD	1868	51	69	06.98-09.01	■
1.9 D (WJZ (DW8))		Diesel	FWD	1868	51	69	06.98-09.01	■
1.9 D (D9B (XUD9AU))		Diesel	FWD	1905	51	70	02.96-12.98	■
1.9 TD (DHX (XUD9TE))		Diesel	FWD	1905	66	90	02.96-09.00	■
1.9 TD (D8B (XUD9TE))		Diesel	FWD	1905	68	92	02.96-05.98	■
2.0 HDi (RHX (DW10BTED))		Diesel	FWD	1997	69	94	10.00-10.06	■
2.0 HDi (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	10.00-10.06	■
EXPERT (222) 07.95-03.08					Van (LCVs-N1 Segment)			
1.6 (222A2 (1580 SPI))		Gasolina	FWD	1581	58	79	02.96-09.00	■
1.8 (LFZ (XU7JP))		Gasolina	FWD	1761	74	101	10.96-09.00	■
2.0 (RFN (EW10J4))		Gasolina	FWD	1997	100	136	09.02-12.06	■
1.9 D 70 (WJY (DW8B))		Diesel	FWD	1868	51	69	12.98-12.06	■
1.9 D 70 (WJZ (DW8))		Diesel	FWD	1868	51	69	12.98-12.06	■
1.9 D (D9B (XUD9AU))		Diesel	FWD	1905	51	70	02.96-12.98	■
1.9 TD (DHX (XUD9TE))		Diesel	FWD	1905	66	90	02.96-09.00	■
1.9 TD (D8B (XUD9TE))		Diesel	FWD	1905	68	92	02.96-05.98	■
2.0 HDi (RHX (DW10BTED))		Diesel	FWD	1997	69	94	07.00-12.06	■
2.0 HDi (RHZ (DW10ATED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10BTED+))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHZ (DW10CTED))		Diesel	FWD	1997	80	109	07.00-12.06	■
2.0 HDi (RHW (DW10ATED4))		Diesel	FWD	1997	80	109	07.00-12.06	■