

LISTA DE APLICACIONES - BUYERS GUIDE

142511




8 424073 292940

Qty: 300

Weight: 2.580

O.E.M.	MAKE
2 717 802	FORD
KTPZ312K021AC	FORD

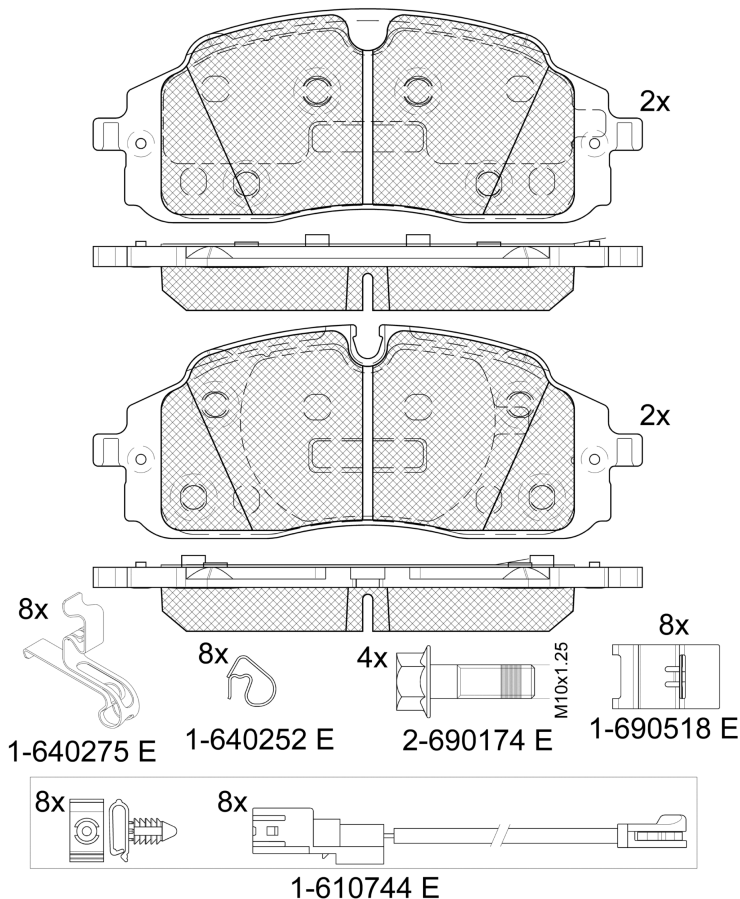

142511



90R-02A0111/6083



Chassis Brake Int. (Bosch)

163.2x63.5x19.7

163.2x63.6x19.7

WVA

27072

27073

27082

27083

MAKE

FORD



Trac.

CC

Kw

CV



Front / Rear

FORD

TOURNEO CUSTOM V710 (NXN) 12.23-

Bus (Minibus-M2-Segment)

2.5 Duratec Plug-in-Hybrid 4x4	Gasol./el éc.	FWD	2488	171	232	04.24-	■
E-Tourneo Custom	Eléctrico	RWD		100	136	08.24-	■
E-Tourneo Custom	Eléctrico	RWD		160	218	08.24-	■
2.0 EcoBlue	Diesel	FWD	1996	81	110	12.23-	■
2.0 EcoBlue	Diesel	FWD	1996	100	136	12.23-	■
2.0 EcoBlue AWD	Diesel	4WD	1996	100	136	12.23-	■
2.0 EcoBlue	Diesel	FWD	1996	110	150	12.23-	■
2.0 EcoBlue	Diesel	FWD	1996	125	170	12.23-	■
2.0 EcoBlue AWD	Diesel	4WD	1996	125	170	12.23-	■

TRANSIT CUSTOM (NRN) 10.23-

Van (LCVs-N1 Segment)

2.5 Duratec Plug-in-Hybrid 4x4	Gasol./el éc.	FWD	2488	171	232	04.24-	■
E-Transit Custom	Eléctrico	RWD		100	136	08.24-	■
E-Transit Custom	Eléctrico	RWD		160	218	08.24-	■
E-Transit Custom	Eléctrico	RWD		210	286	04.24-	■
2.0 EcoBlue	Diesel	FWD	1996	81	110	10.23-	■
2.0 EcoBlue	Diesel	FWD	1996	100	136	10.23-	■
2.0 EcoBlue AWD	Diesel	4WD	1996	100	136	10.23-	■
2.0 EcoBlue	Diesel	FWD	1996	110	150	10.23-	■
2.0 EcoBlue	Diesel	FWD	1996	125	170	10.23-	■
2.0 EcoBlue AWD	Diesel	4WD	1996	125	170	10.23-	■

LISTA DE APLICACIONES - BUYERS GUIDE

TRANSIT CUSTOM V710 (NXN) 03.24-					Bus (LCVs-N1 Segment)			
2.5 Duratec Plug-in-Hybrid 4x4		Gasol./el éc.	FWD	2488	171	232	04.24-	■
E-Transit Custom		Eléctrico	RWD		100	136	08.24-	■
E-Transit Custom		Eléctrico	RWD		160	218	08.24-	■
2.0 EcoBlue		Diesel	FWD	1996	81	110	04.24-	■
2.0 EcoBlue		Diesel	FWD	1996	100	136	04.24-	■
2.0 EcoBlue AWD		Diesel	4WD	1996	100	136	04.24-	■
2.0 EcoBlue		Diesel	FWD	1996	110	150	04.24-	■
2.0 EcoBlue		Diesel	FWD	1996	125	170	04.24-	■
2.0 EcoBlue AWD		Diesel	4WD	1996	125	170	04.24-	■