

LISTA DE APLICACIONES - BUYERS GUIDE

142516




8 424073 292964

Qty: 300

Weight: 1.640

O.E.M.	MAKE
2 712 621	FORD
KTPZ312M008AB	FORD

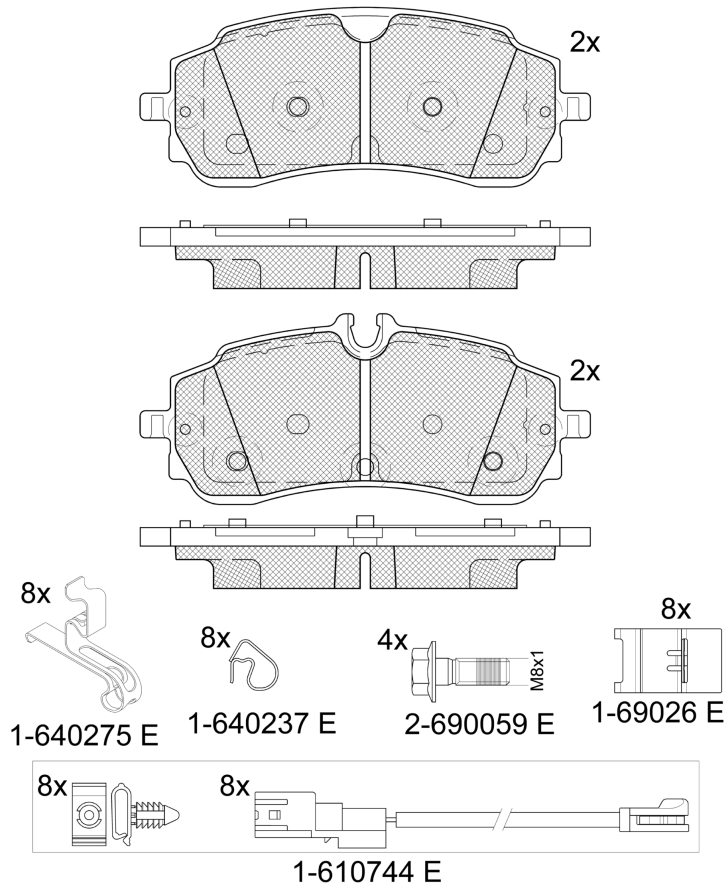

142516



90R-02A0111/6085



Chassis Brake Int. (Bosch)

133.9x53.4x18.8

133.9x56.7x18.8

WVA

27067

27068

MAKE

FORD



Trac.	CC	Kw	CV
-------	----	----	----



Front / Rear

FORD

TOURNEO CUSTOM V710 (NXN) 12.23-

Bus (Minibus-M2-Segment)

2.5 Duratec Plug-in-Hybrid 4x4	Gasol./el éc.	FWD	2488	171	232	04.24-	■
E-Tourneo Custom	Eléctrico	RWD		100	136	08.24-	■
E-Tourneo Custom	Eléctrico	RWD		160	218	08.24-	■
2.0 EcoBlue	Diesel	FWD	1996	81	110	12.23-	■
2.0 EcoBlue	Diesel	FWD	1996	100	136	12.23-	■
2.0 EcoBlue AWD	Diesel	4WD	1996	100	136	12.23-	■
2.0 EcoBlue	Diesel	FWD	1996	110	150	12.23-	■
2.0 EcoBlue	Diesel	FWD	1996	125	170	12.23-	■
2.0 EcoBlue AWD	Diesel	4WD	1996	125	170	12.23-	■

TRANSIT CUSTOM (NRN) 10.23-

Van (LCVs-N1 Segment)

2.5 Duratec Plug-in-Hybrid 4x4	Gasol./el éc.	FWD	2488	171	232	04.24-	■
E-Transit Custom	Eléctrico	RWD		100	136	08.24-	■
E-Transit Custom	Eléctrico	RWD		160	218	08.24-	■
E-Transit Custom	Eléctrico	RWD		210	286	04.24-	■
2.0 EcoBlue	Diesel	FWD	1996	81	110	10.23-	■
2.0 EcoBlue	Diesel	FWD	1996	100	136	10.23-	■
2.0 EcoBlue AWD	Diesel	4WD	1996	100	136	10.23-	■
2.0 EcoBlue	Diesel	FWD	1996	110	150	10.23-	■
2.0 EcoBlue	Diesel	FWD	1996	125	170	10.23-	■
2.0 EcoBlue AWD	Diesel	4WD	1996	125	170	10.23-	■

LISTA DE APLICACIONES - BUYERS GUIDE

TRANSIT CUSTOM V710 (NXN) 03.24-					Bus (LCVs-N1 Segment)			
2.5 Duratec Plug-in-Hybrid 4x4		Gasol./el éc.	FWD	2488	171	232	04.24-	■
E-Transit Custom		Eléctrico	RWD		100	136	08.24-	■
E-Transit Custom		Eléctrico	RWD		160	218	08.24-	■
2.0 EcoBlue		Diesel	FWD	1996	81	110	04.24-	■
2.0 EcoBlue		Diesel	FWD	1996	100	136	04.24-	■
2.0 EcoBlue AWD		Diesel	4WD	1996	100	136	04.24-	■
2.0 EcoBlue		Diesel	FWD	1996	110	150	04.24-	■
2.0 EcoBlue		Diesel	FWD	1996	125	170	04.24-	■
2.0 EcoBlue AWD		Diesel	4WD	1996	125	170	04.24-	■