

# LISTA DE APLICACIONES - BUYERS GUIDE

## 151641




8 424073 089533


Qty: 660

Weight: 10.848

O.E.M.	MAKE
1 218 2176	SAF
AJN00018	FRUEHAUF
M100659	SMB
M100669	FRUEHAUF

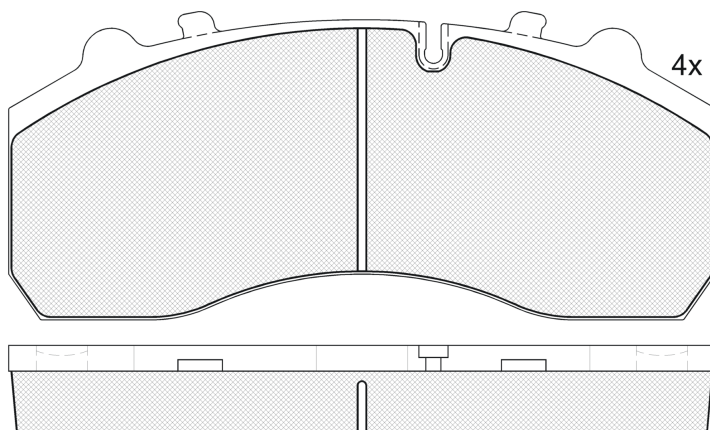

## 151641-066

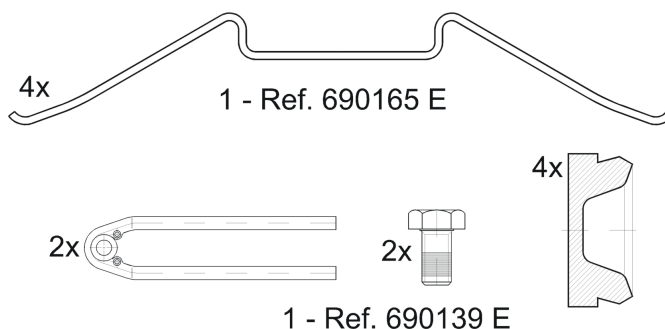

## 151641



90R-01178/1042



Perrot-Wabco PAN 22

247.3x107.75x30

WVA

29154

MAKE

FRUEHAUF

SAF

SMB



Trac.

CC

Kw

CV



Front / Rear

### FRUEHAUF

Eje/Axle

Trailer Axle

Llanta 22.5" 430x45 (PAN22)

01.53-



### SAF

SK 02.98-

Trailer Axle

SKRZ 11222 K

02.98-



SKRZ 9022 K

02.98-



SKRB

Trailer Axle

SKRB 9022 H (MK IV)

01.53-



SKRB 9022 H (Modul X)

01.53-



SKRB 9022 K

01.53-



SKRB 9022 K 01 (SN7)

01.53-



SKRB 9022 KI (SN7) Integral

01.53-



SKRB 9022 KI 01 (SN7) Integral

01.53-



SKRS 12.92-

Trailer Axle

SKRS 11222 K

12.92-



SKRS 9022 K

12.92-



### SMB

O 01.92-

Trailer Axle

O-A2020 D1-09

04.92-



O-A2040 D1-09

04.92-



O-A2095 D1-09

04.92-



O-A2130 D1-09

04.92-



