

# LISTA DE APLICACIONES - BUYERS GUIDE

## 151641




8 424073 089533


Qty: 660

Weight: 10.848

O.E.M.	MAKE
1 218 2176	SAF
AJN00018	FRUEHAUF
M100659	SMB
M100669	FRUEHAUF

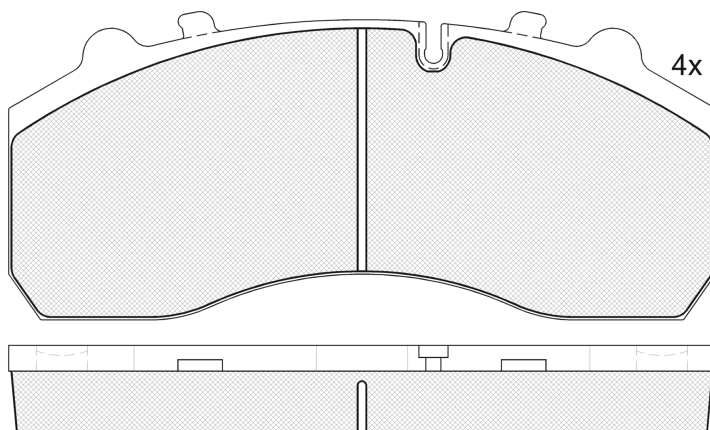

## 151641-066

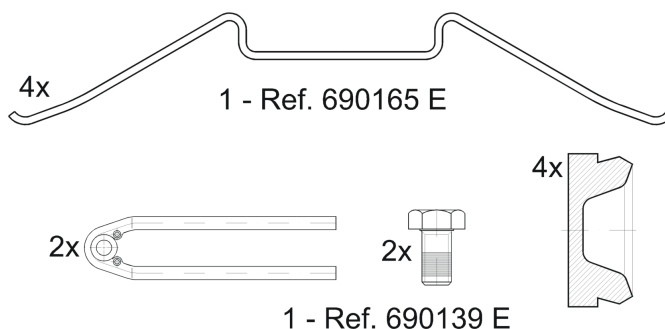

## 151641



90R-01178/1042



Perrot-Wabco PAN 22

247.3x107.75x30

WVA

29154

MAKE

FRUEHAUF

SAF

SMB



Trac.

CC

Kw

CV



Front / Rear

### FRUEHAUF

Eje/Axle									Trailer Axle
Llanta 22.5" 430x45 (PAN22)								01.53-	■

### SAF

SK 02.98-									Trailer Axle
SKRZ 11222 K								02.98-	■
SKRZ 9022 K								02.98-	■

SKRB									Trailer Axle
SKRB 9022 H (MK IV)								01.53-	■
SKRB 9022 H (Modul X)								01.53-	■
SKRB 9022 K								01.53-	■
SKRB 9022 K 01 (SN7)								01.53-	■
SKRB 9022 KI (SN7) Integral								01.53-	■
SKRB 9022 KI 01 (SN7) Integral								01.53-	■

SKRS 12.92-									Trailer Axle
SKRS 11222 K								12.92-	■
SKRS 9022 K								12.92-	■

### SMB

O 01.92-									Trailer Axle
O-A2020 D1-09								04.92-	■
O-A2040 D1-09								04.92-	■
O-A2095 D1-09								04.92-	■
O-A2130 D1-09								04.92-	■

